



F01 发动机总成 I ENGINE I

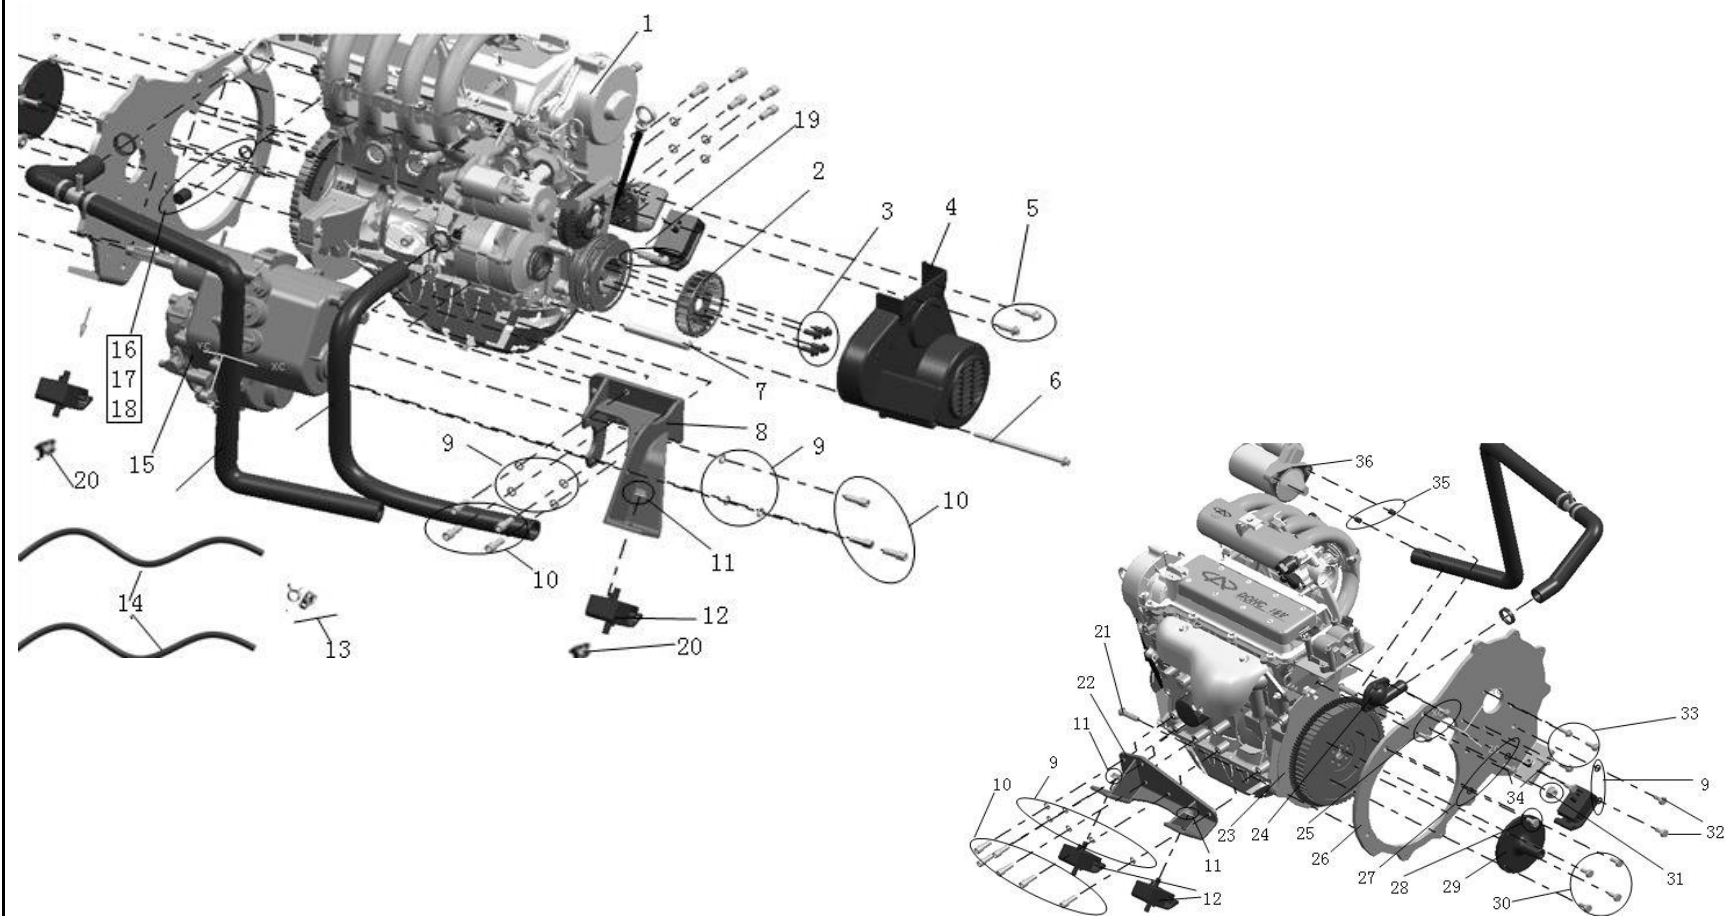

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W0100000	ENGINE	发动机总成	1	Chevy
2	W0101004	FAN	散热风扇	1	
3	GB/T 5789 M6×16	BOLT, FLANGE (M6×16)	六角法兰面螺栓 (M6×16)	5	
4	W0101003	FAN COVER	发动机风扇护罩	1	
5	GB/T 5789 M8×16	BOLT, FLANGE (M8×16)	六角法兰面螺栓 (M8×16)	2	
6	GB/T 5789 M8×160	BOLT, FLANGE (M8×160)	六角法兰面螺栓 (M8×160)	1	
7	W0101002	SPACER BUSH	发动机风扇护罩安装套	1	
8	W0103020	ENGINE SUPPORT A	发动机支架A	1	
9	GB/T 93 10	SPRING WASHER (Φ 10)	弹簧垫片 (Φ 10)	15	
10	GB/T 70.1 M10×25	INNER-HEX BOLT (M10×25)	内六角圆柱头螺栓 (M10×25)	13	
11	GB/T 6187.1 M10×1.25	LOCKNUT, FLANGE (M10×1.25)	六角法兰面自锁螺母 (M10×1.25)	4	
12	W0104010	RUBBER WASHER OF ENGING (SQUARE)	发动机固定缓冲胶	4	
13	9852-100113	CLAMP (Φ 10)	卡箍 (Φ 10)	2	
14	A1209030	FUEL HOSE Φ6×Φ10.5×400	油管 Φ6×Φ10.5×400	2	
15	F0301000	GEAR-BOX	变速箱总成	1	
16	F0201120	COBBRA, ENGINE HOSE	发动机水管堵头	1	1100GK
17	17960-2040	STOPPER, ENGINE HOSE	发动机水管塞	1	1100GK
18	9852-162505	CIRCLIP (16-25)	卡箍 (16-25)	1	
19	GB/T 70.2 M12×1.25×45	BOLT (M12×1.25×45)	内六角半圆头螺栓 M12×1.25×45	1	
20	GB/T 6187.1 M10×1.25	LOCKNUT, FLANGE (M10×1.25)	六角法兰面自锁螺母 (M10×1.25)	8	
21	GB/T 5789 M12×1.25×35	BOLT, FLANGE (M12×1.25×35)	六角法兰面螺栓 (M12×1.25×35)	1	

22	W0103010	ENGINE SUPPORT B	发动机安装座B	1	
23	F0101269	ENVELOP BOARD, ENGINE	发动机上封板	1	奇瑞发动机配件
24	W0101001	OUTLET WATER GAP, ENGINE	发动机出水口	1	铝件
25	GB/T 5787 M8×35	BOLT (M8×35)	六角法兰盘螺栓 (M8×35)	2	M8-35 (发动机配件)
26	W0301060	CVT SUPPORT COVER	CVT外罩安装板	1	
27	GB/T 93 12	SPRING WASHER (Φ12)	弹簧垫片 (Φ12)	2	
28	GB/T 5789 M12×1.75×30	BOLT, FLANGE (M12×1.75×30)	六角法兰面螺栓 (M12×1.75×30)	2	
29	F0301121	FLANGE PLATE, CVT SUPPORT	CVT安装法兰盘	1	CVT附件
30	GB/T 5787 M10×20	BOLT (M10×20)	外六角螺栓 (M10×20)	4	
31	GB/T 6187.1 M12×1.25	NUT, FLANGE (M12×1.25)	六角法兰面螺母 (M12×1.25)	1	
32	GB/T 5782 M10×25	BOLT (M10×25)	外六角螺栓 (M10×25)	2	
33	GB/T 5789 M8×25	BOLT, FLANGE (M8×25)	六角法兰面螺栓 (M8×25)	3	
34	GB/T 5789 M8×30	BOLT, FLANGE (M8×30)	六角法兰面螺栓 (M8×30)	7	
35	F0101002	STEEL BUSH, STARTING MOTOR	起动电机定位套	2	发动机附件
36	W0101005	STARTING MOTOR	起动电机	1	发动机附件


F02 发动机总成 II ENGINE II

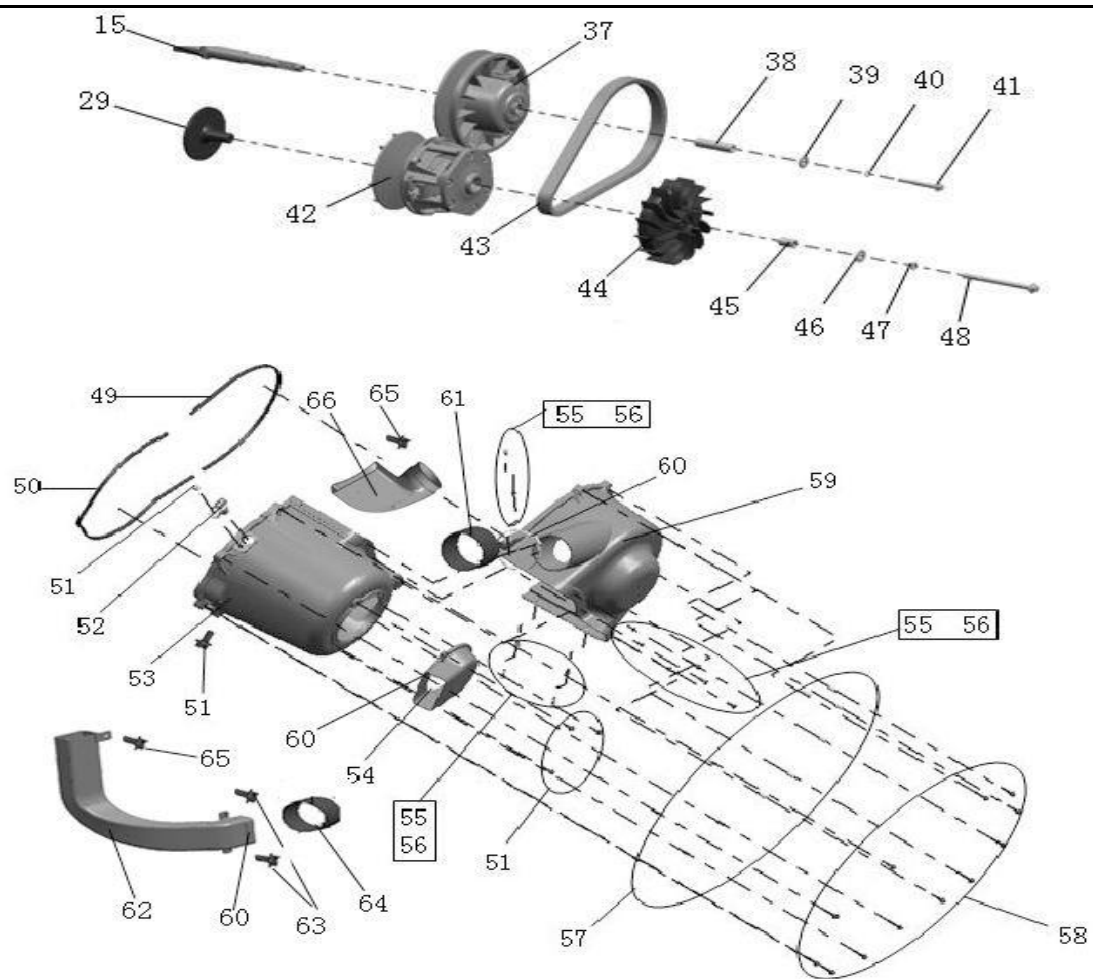

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
37	W0301020	CVT SECONDARY SHEAVE	CVT从动轮	1	
38	W0301050	ORIENTATION COVER, SECONDARY SHEAVE	从动轮定位套	1	
39	GB/T 95 12	WASHER ($\phi 12 \times \phi 30 \times 2$)	平垫 ($\phi 12 \times \phi 30 \times 2$)	1	12-30-2CVT附件
40	GB/T 93 10	SPRING WASHER ($\phi 10$)	弹簧垫片 ($\phi 10$)	1	CVT附件
41	GB/T 5787 M10 $\times$ 115	BOLT(M10 $\times$ 115)	六角法兰盘螺栓(M10 $\times$ 115)	1	
42	W0301010	CVT DRIVER	CVT主动轮	1	
43	W0301030	CVT BELT	CVT皮带	1	
44	W0301070	CVT IMPELLER	CVT风扇	1	
45	90601024	SPACER BUSH, DRIVER	主动轮定位套	1	1100GK
46	GB/T 95 12	WASHER ($\phi 12.5 \times \phi 30 \times 3$)	平垫片 ($\phi 12.5 \times \phi 30 \times 3$)	1	12.5 $\times$ 30 $\times$ 3 CVT附件
47	GB/T 93 12	SPRING WASHER ($\phi 12$)	弹簧垫片 ($\phi 12$)	1	$\phi 12$ (CVT附件)
48	GB/T 5787 M12 $\times$ 175	BOLT(M12 $\times$ 175)	六角法兰盘螺栓(M12 $\times$ 175)	1	
49	90601026	SEAL, CVT COVER (LONG)	CVT罩密封条(长)	1	
50	90601027	SEAL, CVT COVER (SHORT)	CVT罩密封条(短)	1	
51	GB/T 5787 M6 $\times$ 12	BOLT(M6 $\times$ 12)	六角法兰盘螺栓(M6 $\times$ 12)	5	
52	W0102010	CRANKSHAFT SENSOR	曲轴位置传感器	1	发动机附件
53	W0301160	CVT COVER (LEFT)	CVT罩(左体)	1	塑件
54	W0301130	JOINT, AIR INLET DUCT	CVT进风管转接头	1	塑件
55	GB/T 818 M6 $\times$ 15	BOLT(M6 $\times$ 15)	十字盘头螺栓(M6 $\times$ 15)	6	
56	GB/T 95 6	WASHER ($\phi 6 \times \phi 12 \times 1.6$)	平垫 ($\phi 6 \times \phi 12 \times 1.6$)	6	发动机组
57	F0301600	CVT PIN	CVT安装销	12	发动机组

58	GB/T 5787 M6×25	BOLT (M6×25)	六角法兰盘螺栓 (M6×25)	12	
59	W0301170	CVT COVER (RIGHT)	CVT罩 (右体)	1	塑件
60	9852-801005	CIRCLIP (80-100)	卡箍 (80-100)	1	
61	W0301110	RUBBER PIPE (Φ 85× Φ 92×60)	橡胶管 (Φ 85× Φ 92×60)	1	
62	W0301130	CVT HOSE, IMPORT WIND	CVT进风管	1	
63	9305-080200	EXPANSION SCREW (M8×20)	塑料膨胀螺丝 (M8×20)	2	
64	W0301100	RUBBER PIPE (Φ 85× Φ 92×60)	橡胶管 (Φ 85× Φ 92×130)	1	
65	GB/T 819.1 M6×20	BOLT (M6×20)	大扁头螺栓 (M6×20)	2	
66	W0301180	CVT HOSE, EXPORT WIND	CVT出风管	1	


F03 前悬挂总成 FRONT SUSPENSION

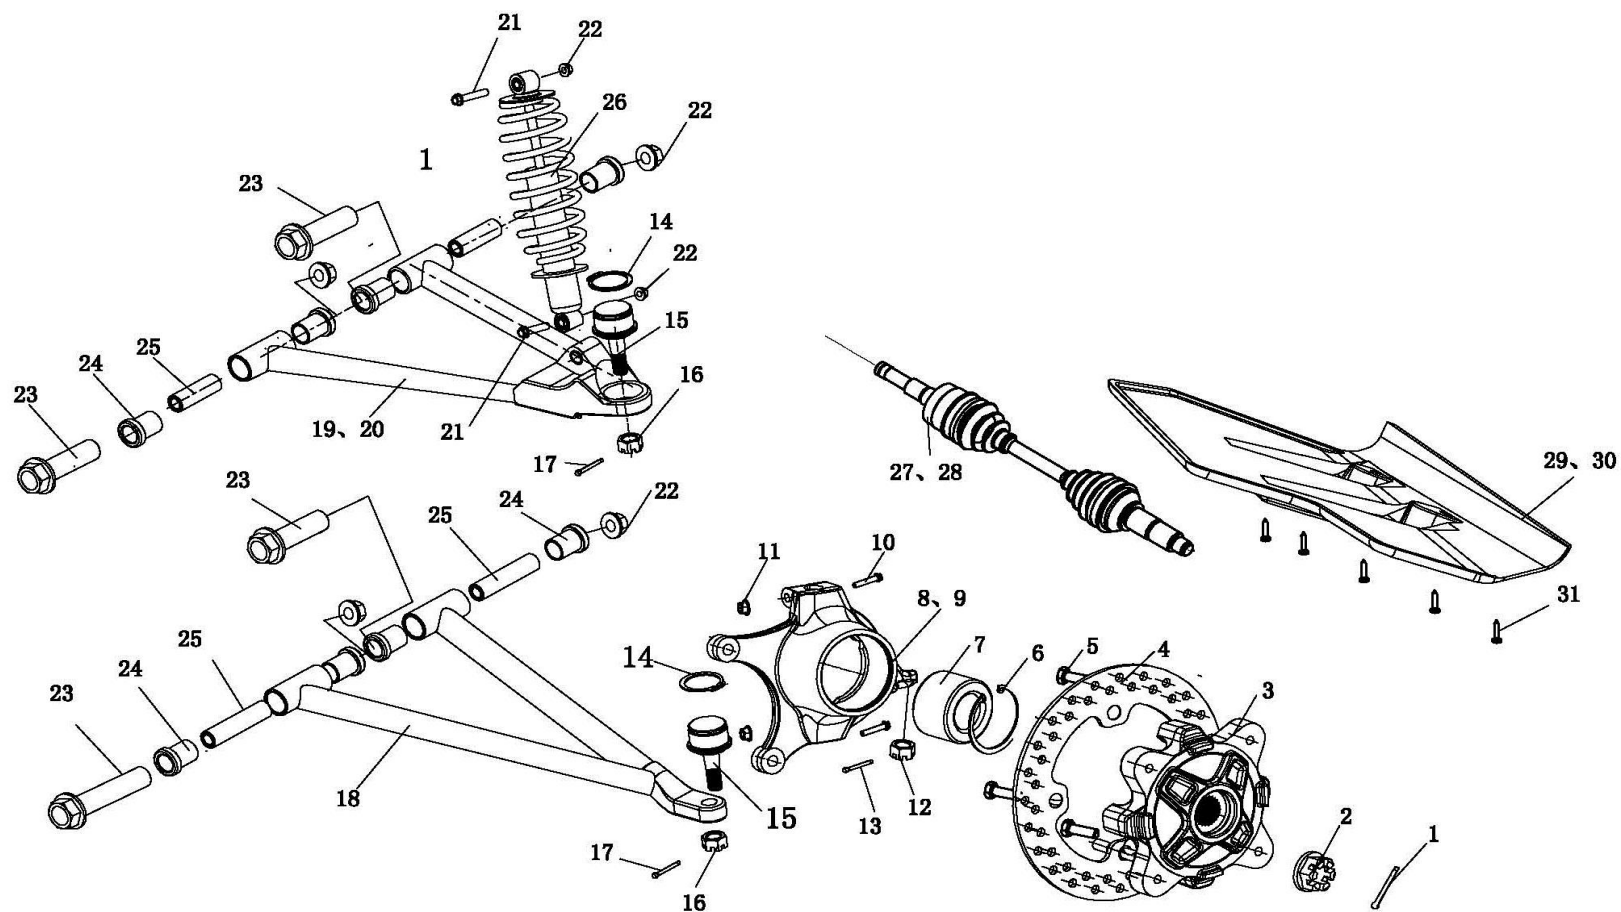

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W0405010	NUT	半轴六角开槽螺母	2	
2	GB/T 91 3×25	COTTER PIN (3×25)	开口销 (3×25)	2	
3	W0803010	FRONT WHEEL HUB	前连接盘	2	
4	W0803020	FRONT BRAKE DISC	前制动盘	2	
5	GB/T 70.1 M10×25	BOLT (M10×25)	内六角沉头螺栓 (M10×25)	8	
6	GB/T 893.2 72	CIRCLIP (Φ 72)	孔用挡圈 (Φ 72)	2	
7	W0503030	BEARING	前转向节轴承	2	
8	W0503010	FRONT STEERING KNUCKLE(L)	左转向节	1	
9	W0503020	FRONT STEERING KNUCKLE(R)	右转向节	1	
10	GB/T 5787 M8×55	BOLT, FLANGE (M8×55)	六角法兰面螺栓 (M8×55)	4	
11	GB/T 6187.1 M8	LOCKNUT, FLANGE (M8)	六角法兰面自锁螺母 (M8)	4	
12	GB/T 9457 M10×1.25	NUT (M10×1.25)	六角开槽螺母 (M10×1.25)	2	方向机附件
13	GB/T 91 2.5×20	PIN , SPLIT (2.5×20)	开口销 (2.5×20)	2	方向机附件
14	GB/T 894.2 32	CIRCLIP (Φ 32)	轴用挡圈 (Φ 32)	2	
15	W0505100	JOINT, ARM BALL	球头座	2	
16	GB/T 6179 M12	SCREW CAP, DRIVE AXLETREE M12	六角开槽螺母	4	
17	GB/T 91 3×30	PIN , SPLIT (3×30)	开口销	4	
18	W0505030	FRONT LOWER ARM	前下摇臂	2	
19	W0505010	FRONT LEFT ARM (UPPER)	前左上摇臂	1	
20	W0505020	FRONT RIGHT ARM (UPPER)	前右上摇臂	1	
21	GB/T 5787 M10×1.25×50	BOLT, FLANGE (M10×1.25×50)	六角法兰面螺栓 (M10×1.25×50)	4	

22	GB/T 6187.1 M10×1.25	LOCKNUT, FLANGE (M10×1.25)	六角法兰面自锁螺母 (M10×1.25)	12	
23	GB/T 5787 M10×1.25×90	BOLT, FLANGE (M10×1.25×90)	六角法兰面螺栓 (M10×1.25×90)	8	
24	W0506020	BUSH , ARM	摇臂衬套	16	
25	W0506030	CENTER SPACER	摇臂内隔套	8	
26	W0501010	FRONT SHOCK ABSORBER	前减震	2	
27	W0405020	FRONT CV JOINT (L)	左前半轴	1	
28	W0405030	FRONT CV JOINT (R)	右前半轴	1	
29	W0505040	SUSPENSION PROTECTOR (L)	左摇臂护板	1	
30	W0505050	SUSPENSION PROTECTOR (R)	右摇臂护板	1	
31	GB/T 845 ST4. 2×20	SCREW, TAP (ST4. 2×20)	自攻螺钉 (ST4. 2×20)	10	


F04 后悬挂总成 REAR SUSPENSION

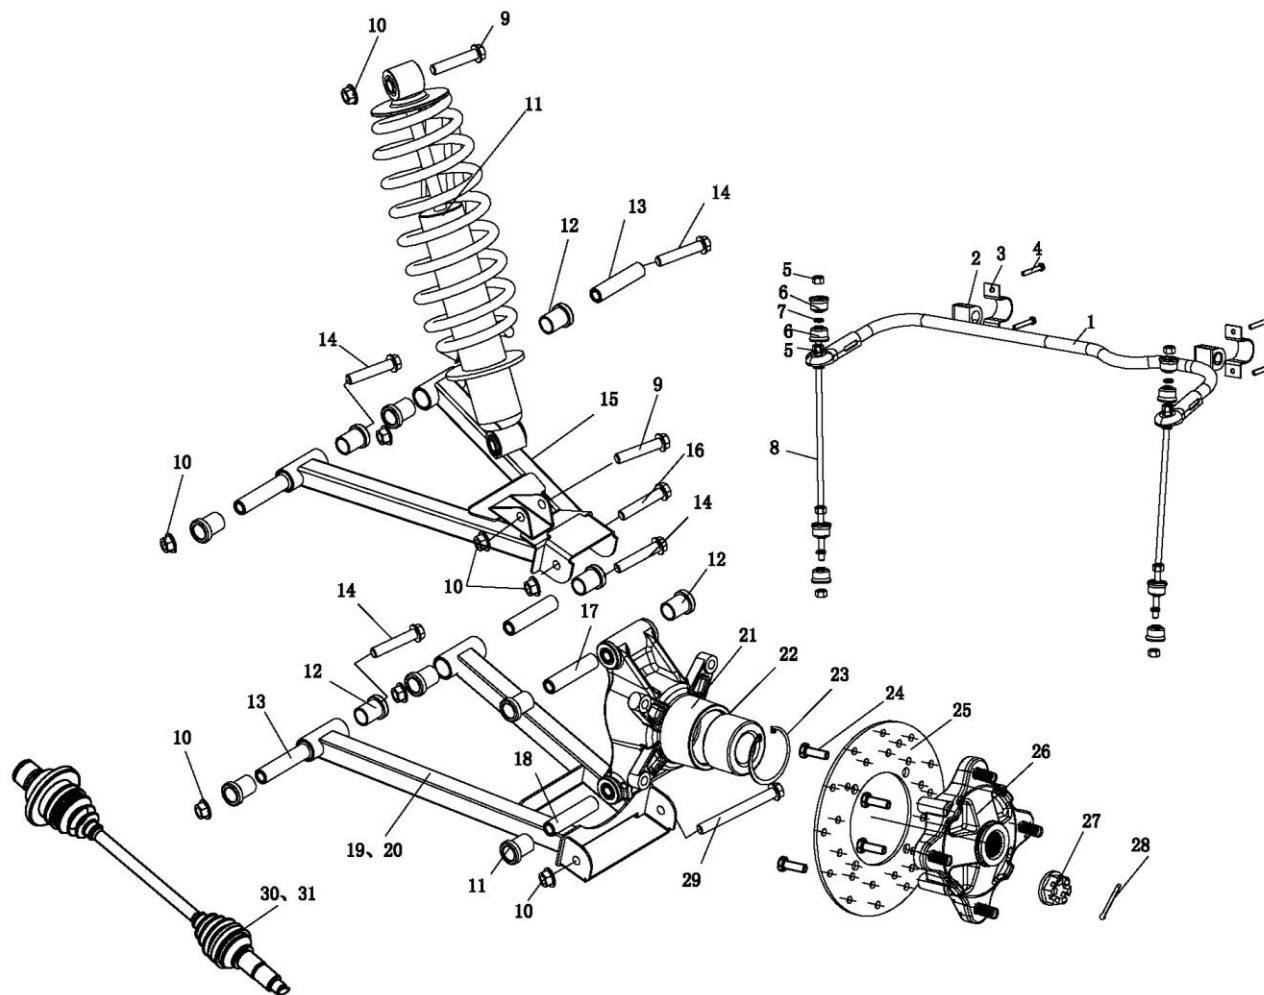

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W0507010	REAR STABILIZER BAR	后平衡杆组件	1	
2	H0507040	RUBBER WASHER	扭力杆缓冲胶	2	
3	H0507050	HOLDER	扭力杆固定座	2	
4	GB/T 16674.2 M8×20	BOLT, FLANGE (M8×20)	六角法兰面螺栓 (M8×20)	4	
5	GB/T 6170 M10	NUT (M10)	外六角螺母 (M10)	8	
6	W0507040	STABILIZER, CUSHION RUBBER	平衡杆缓冲块	8	
7	GB/T 95 11	WASHER (Φ11×Φ30×2.8)	平垫片 (Φ11×Φ30×2.8)	4	
8	W0507050	STABILIZER BOLT	平衡杆拉杆螺栓	2	
9	GB/T 5787 M10×1.25×50	BOLT, FLANGE (M10×1.25×50)	六角法兰面螺栓 (M10×1.25×50)	4	
10	GB/T 6187.1 M10×1.25	LOCKNUT, FLANGE (M10×1.25)	六角法兰面自锁螺母 (M10×1.25)	16	
11	W0502010	REAR SHOCK ABSORBER	后减震	2	
12	W0506020	BUSH , ARM	摇臂衬套	24	
13	W0506030	CENTER SPACER	摇臂内隔套	8	
14	GB/T 5787 M10×1.25×90	BOLT, FLANGE (M10×1.25×90)	六角法兰面螺栓 (M10×1.25×90)	8	
15	W0506010	REAR UPPER ARM ASSY	后上摇臂组件	2	
16	GB/T 5787 M10×1.25×110	BOLT, FLANGE (M10×1.25×110)	六角法兰面螺栓 (M10×1.25×110)	2	
17	W0504040	BUSH ,RR KNUCKLE (S)	后羊角短隔套	2	
18	W0504030	BUSH ,RR KNUCKLE (L)	后羊角长隔套	2	
19	W0506040	REAR LEFT ARM (LOWER)	后左下摇臂	1	
20	W0506050	REAR RIGHT ARM (LOWER)	后右下摇臂	1	
21	W0504010	REAR STEERING KNUCKLE	后羊角	2	

22	W0504020	BEARING	后羊角轴承	2	
23	GB/T 893.2 75	CIRCLIP (Φ 75)	孔用挡圈 (Φ 75)	2	
24	GB/T 5782 M10×25	BOLT, FLANGE (M10×25)	外六角螺栓 (M10×25)	8	
25	W0803050	REAR BRAKE DISC	后制动盘	2	
26	W0803040	REAR WHEEL HUB	后连接盘	2	
27	W0405010	NUT	半轴六角开槽螺母	2	
28	GB/T 91 3×25	COTTER PIN (3×25)	开口销 (3×25)	2	
29	GB/T 5787 M10×1.25×135	BOLT, FLANGE (M10×1.25×135)	六角法兰面螺栓 (M10×1.25×135)	2	
30	W0405040	REAR CV JOINT(L)	左后半轴	1	
31	W0405050	REAR CV JOINT(R)	右后半轴	1	


F05 转向系统 STEERING SYSTEM

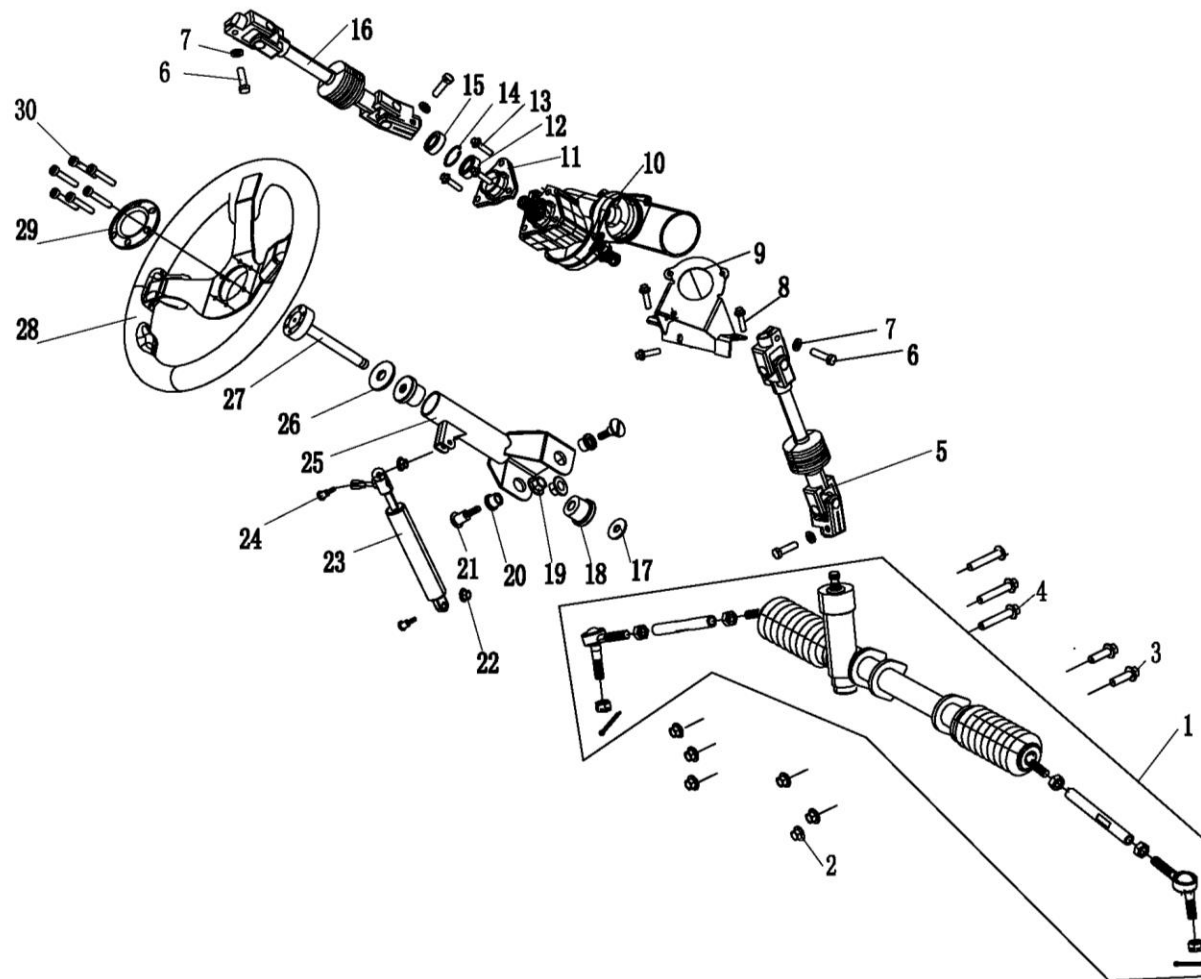

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W0901010	STEERING ASSY	方向机总成	1	
2	GB/T 6187.1 M8	LOCKNUT, FLANGE (M8)	六角法兰面自锁螺母 (M8)	5	
3	GB/T 5787 M8×16	BOLT, FLANGE (M8×16)	六角法兰面螺栓 (M8×16)	2	
4	GB/ T5787 M8×90	BOLT, FLANGE (M8×90)	六角法兰面螺栓 (M8×90)	3	
5	P0120045	STEERING SHAFT	转向传动轴	1	
	W0904040	STEERING SHAFT (BOTTOM)	转向万向节 (下段)	1	OPTION
6	GB/T 5787 M8×25	BOLT, FLANGE (M8×25)	六角法兰面螺栓 (M8×25)	2	OPTION: 4
7	GB/T 93 8	SPRING WASHER (Φ8)	弹簧垫圈 (Φ8)	2	OPTION: 4
8	W0904020	BRACKET, STEERING STRENGTHENER	助力器安装支架组件	1	OPTION
9	GB/T 5787 M8×25	BOLT, FLANGE (M8×25)	六角法兰面螺栓 (M8×25)	3	
10	00904030	STEERING STRENGTHENER	转向助力器	1	
11	00904040	FLANGE, STEERING STRENGTHENER	转向助力法兰盘	1	
12	00904050	BEARING	轴承 (6903-2R)	1	
13	GB/T 5787 M8×30	BOLT, FLANGE (M8×30)	六角法兰面螺栓 (M8×30)	3	
14	GB/T 893.2 30	CIRCLIP (Φ30)	孔用弹性挡圈 (Φ30)	1	
15	00904060	OIL SEAL, STEERING STRENGTHENER	转向助力器油封	1	
16	W0904030	STEERING SHAFT (TOP)	转向万向节 (上段)	1	
17	GB/T 95 14	GASKET (Φ14×Φ26×3)	平垫片 (Φ14×Φ26×3)	1	
18	00903050	SPACER BUSH (NYLON)	方向柱管尼龙套	2	
19	GB/T 6187.2 M8	LOCKING NUT (M8)	六角自锁螺母 (M8)	2	
20	W0806030	SPACER BUSH (NYLON)	尼龙小隔套	2	
21	00903010	BOLT, STEERING COLUMN	方向柱固定螺栓	2	
22	GB/T 6187.2 M6	LOCKING NUT (M6)	六角自锁螺母 (M6)	2	

23	W0903020	GAS SRPING, STEERING COLUMN	方向柱调节气弹簧	1	
24	S1001005	BOLT(M6)	台阶螺栓(M6)	2	
25	00903080	STEERING COLUMN	方向柱管	1	
26	W0903050	SPRING WASHER	波形弹垫	2	
27	90101020	CORE SHAFT, STEERING	方向柱管轴	1	
28	A0902010	STEERING WHEEL ASSY	方向盘总成	1	
29	W0902010	DECORATING COVER	喇叭按钮装饰罩	1	
30	GB/T 70.1 M5×15	BOLT(M5×15)	内六角螺栓(M5×15)	6	


F06 前、后牙包总成 FRONT、 REAR AXLE ASSY

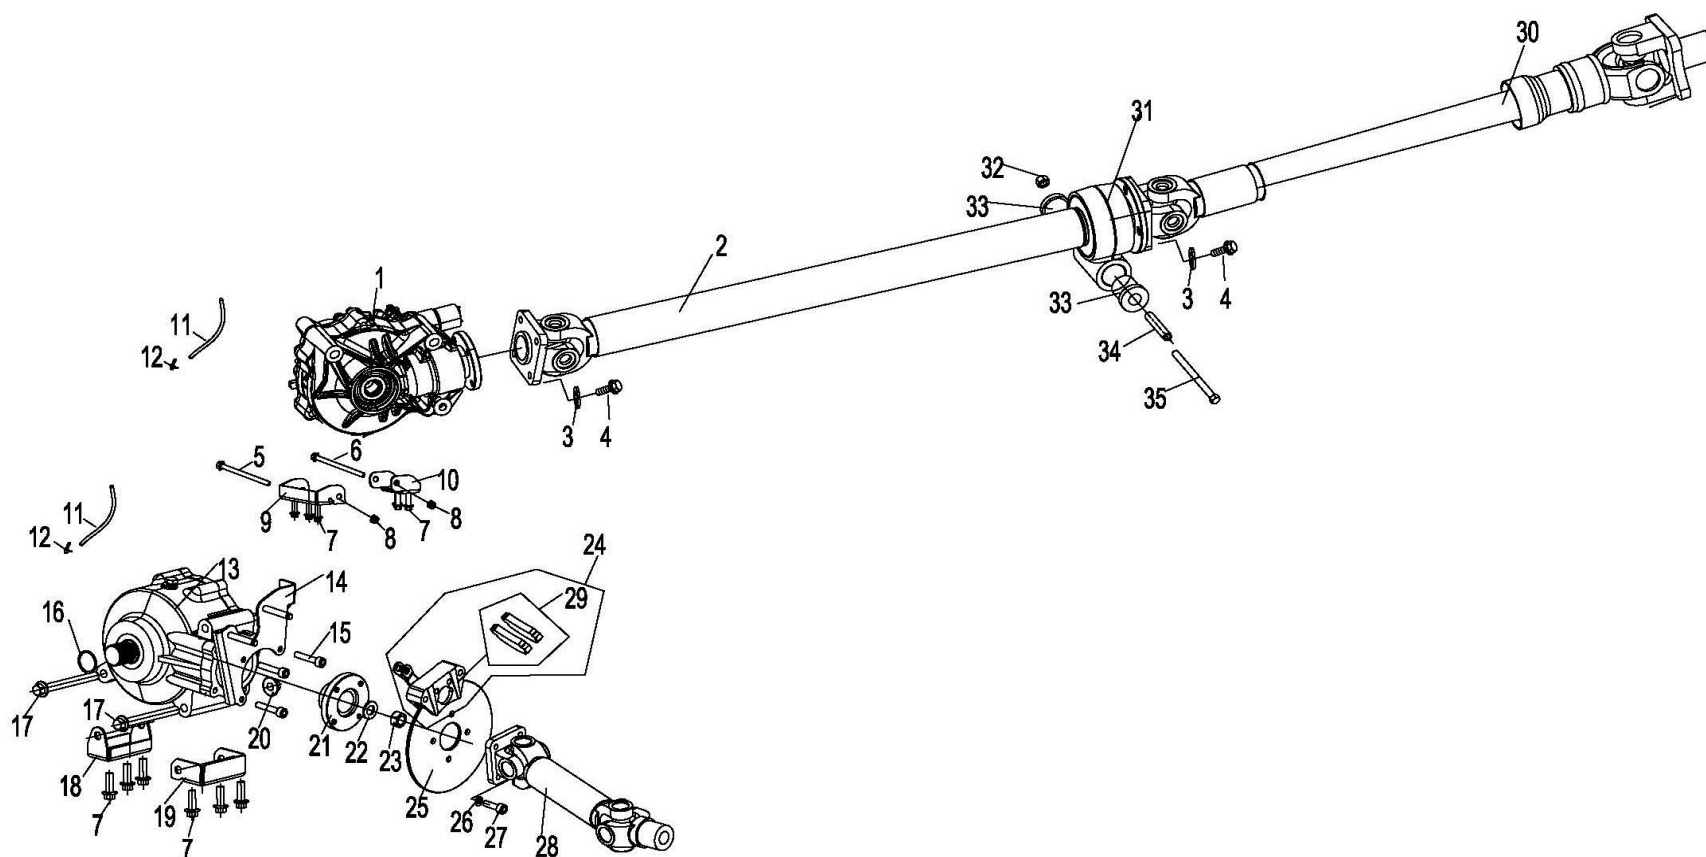

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W0401010	FRONT AXLE	前牙包	1	
2	W0404030	FRONT DRIVE SHAFT	前传动轴	1	
3	GB/T 93 8	SPRING WASHER ($\phi 8$)	弹簧垫圈 ($\phi 8$)	4	
4	GB/T 70.1 M8 $\times$ 25	BOLT(M8 $\times$ 25)	内六角圆柱头螺栓(M8 $\times$ 25)	4	
5	GB/T 5787 M10 $\times$ 1.25 $\times$ 145	BOLT, FLANGE (M10 $\times$ 1.25 $\times$ 145)	六角法兰面螺栓 (M10 $\times$ 1.25 $\times$ 145)	1	
6	GB/T 5787 M10 $\times$ 1.25 $\times$ 85	BOLT, FLANGE (M10 $\times$ 1.25 $\times$ 85)	六角法兰面螺栓 (M10 $\times$ 1.25 $\times$ 85)	1	
7	GB/T 5787 M8 $\times$ 16	BOLT, FLANGE (M8 $\times$ 16)	六角法兰面螺栓 (M8 $\times$ 16)	12	
8	GB/T 6187.1 M10 $\times$ 1.25	LOCKNUT, FLANGE(M10 $\times$ 1.25)	六角法兰面自锁螺母(M10 $\times$ 1.25)	2	
9	W0401020	HOLDER, FRONT AXLE(FR)	前桥前固定座	1	
10	W0401030	HOLDER, FRONT AXLE(RR)	前桥后固定座	1	
11	H0205040	AIR HOSE, AXLE($\phi 6 \times \phi 8 \times 450$)	牙包通风管 ($\phi 6 \times \phi 8 \times 450$)	2	
12	9852-100113	CLAMP ($\phi 10$)	卡箍 ($\phi 10$)	2	
13	W0402000	REAR AXLE	后牙包	1	
14	W0402030	SUPPORT, PARKING CALIPER	驻车卡钳固定板	1	
15	GB/T 70.1 M8 $\times$ 45	BOLT(M8 $\times$ 45)	内六角圆柱头螺栓(M8 $\times$ 45)	3	后桥附件
16	GB/T 895.2 32	CIRCLIP($\phi 32$)	轴用钢丝挡圈 ($\phi 32$)	2	后桥附件
17	GB/T 5787 M12 $\times$ 1.25 $\times$ 115	BOLT, FLANGE (M12 $\times$ 1.25 $\times$ 115)	六角法兰面螺栓 (M12 $\times$ 1.25 $\times$ 115)	2	
18	W0402010	SUPPORT, REAR AXLE (R)	后牙包后固定座	1	
19	W0402020	HOLDER, REAR AXLE(RR)	后牙包前固定座	1	
20	GB/T 6187.1 M12 $\times$ 1.25	LOCKNUT, FLANGE(M12 $\times$ 1.25)	六角法兰面自锁螺母(M12 $\times$ 1.25)	2	
21	W0404010	COUPLING FLANGE	传动轴连接法兰	1	
22	GB/T 95 14	WASHER($\phi 14 \times \phi 28 \times 2$)	平垫片 ($\phi 14 \times \phi 28 \times 2$)	1	
23	GB/T 6170 M14 $\times$ 1.25	NUT(M14 $\times$ 1.25)	外六角螺母(M14 $\times$ 1.25)	1	


24	W0809010	PARKING DISC	手制动盘	1	
25	W0809020	PARKING CALIPER	驻车卡钳	1	
26	GB/T 93 8	SPRING WASHER ($\phi 8$)	弹簧垫圈 ($\phi 8$)	4	
27	GB/T 70.1 M8 $\times$ 30	BOLT (M8 $\times$ 30)	内六角圆柱头螺栓 (M8 $\times$ 30)	4	
28	W0404020	REAR DRIVE SHAFT	后传动轴	1	
29	91501007	PARKING DISC PAD	手制动蹄片	2	
30	W0404040	FRONT DRIVE SHAFT (MIDDLE)	前传动轴 (中)	1	XY1100UEL
31	GB/T 6187.1 M10 $\times$ 1.25	LOCKNUT, FLANGE (M10 $\times$ 1.25)	六角法兰面自锁螺母 (M10 $\times$ 1.25)	1	
32	C0404070	BUSHING, DRIVE SHAFT	传动轴过桥衬套	2	
33	C0404060	BRIDGE, DRIVE SHAFT	传动轴过桥	1	
34	F0404050	BUSH	传动轴过桥内隔套	1	
35	GB/T 5786 M10 $\times$ 1.25 $\times$ 105	BOLT (M10 $\times$ 1.25 $\times$ 105)	外六角螺栓 (M10 $\times$ 1.25 $\times$ 105)	1	

F07 顶棚 CEILING JOIST

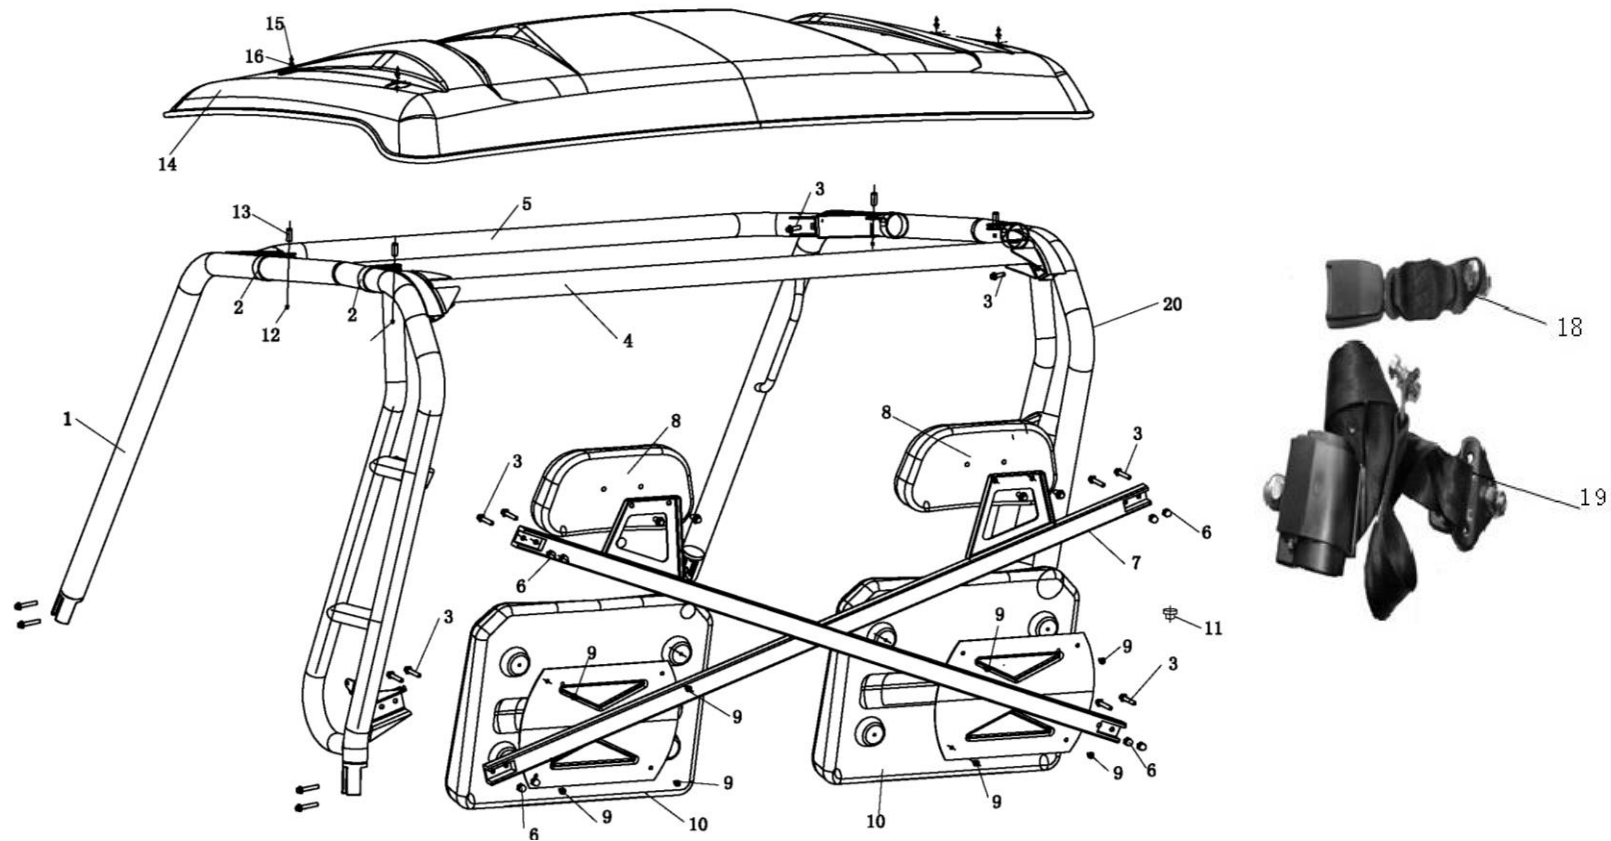

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W1202010	FRONT PROTECT POLE ASSY(L)	前龙门框组件（左）	1	
2	W1202030	HOOP (Φ 45)	抱箍 (Φ 45)	4	
3	GB/T 5787 M8×16	BOLT, FLANGE (M8×16)	六角法兰面螺栓 (M8×16)	16	
4	W1202040	REAR THWARTWISE PIPE	龙门框后横管组件	1	
5	W1202050	FRONT BENT PIPE	龙门框前弯管组件	1	
6	GB/T 923 M8	CAP NUT (M8)	盖形螺母 (M8)	8	
7	W1204010	BACKREST PIPE	靠背固定管组件	1	
8	A1213010	HEADREST	头靠	2	
9	GB/T 818 M5×20	SCREW (M5×20)	十字盘头螺栓 (M5×20)	8	
10	W1212060	BACKREST	靠背	2	
11	W1112050	RUBBER, STORE BOX	置物箱卡块	2	
12	GB/T 923 M6	CAP NUT (M6)	盖形螺母 (M6)	4	
13	W1202060	CENTER SPACER, HOOP	抱箍隔套	4	
14	W1106010	CEILING	顶棚	1	
15	GB/T 5787 M6×55	BOLT, FLANGE (M6×55)	六角法兰面螺栓 (M6×55)	4	
16	GB/T 95 6	WASHER (Φ 6× Φ 12×2)	平垫片 (Φ 6× Φ 12×2)	4	
17	GB/T 70.1 M10×30	BOLT (M10×30)	内六角圆柱头螺栓 (M10×30)	8	
18	L1222020	LOCK CATCH, SAFETY BELT	安全带锁扣	2	配螺母2个
19	L1111011	SAFETY BELT ASSY	安全带总成	2	配螺母4个
20	W1202020	FRONT PROTECT POLE ASSY(R)	前龙门框组件（右）	1	
21					


F08 顶棚 CEILING JOIST

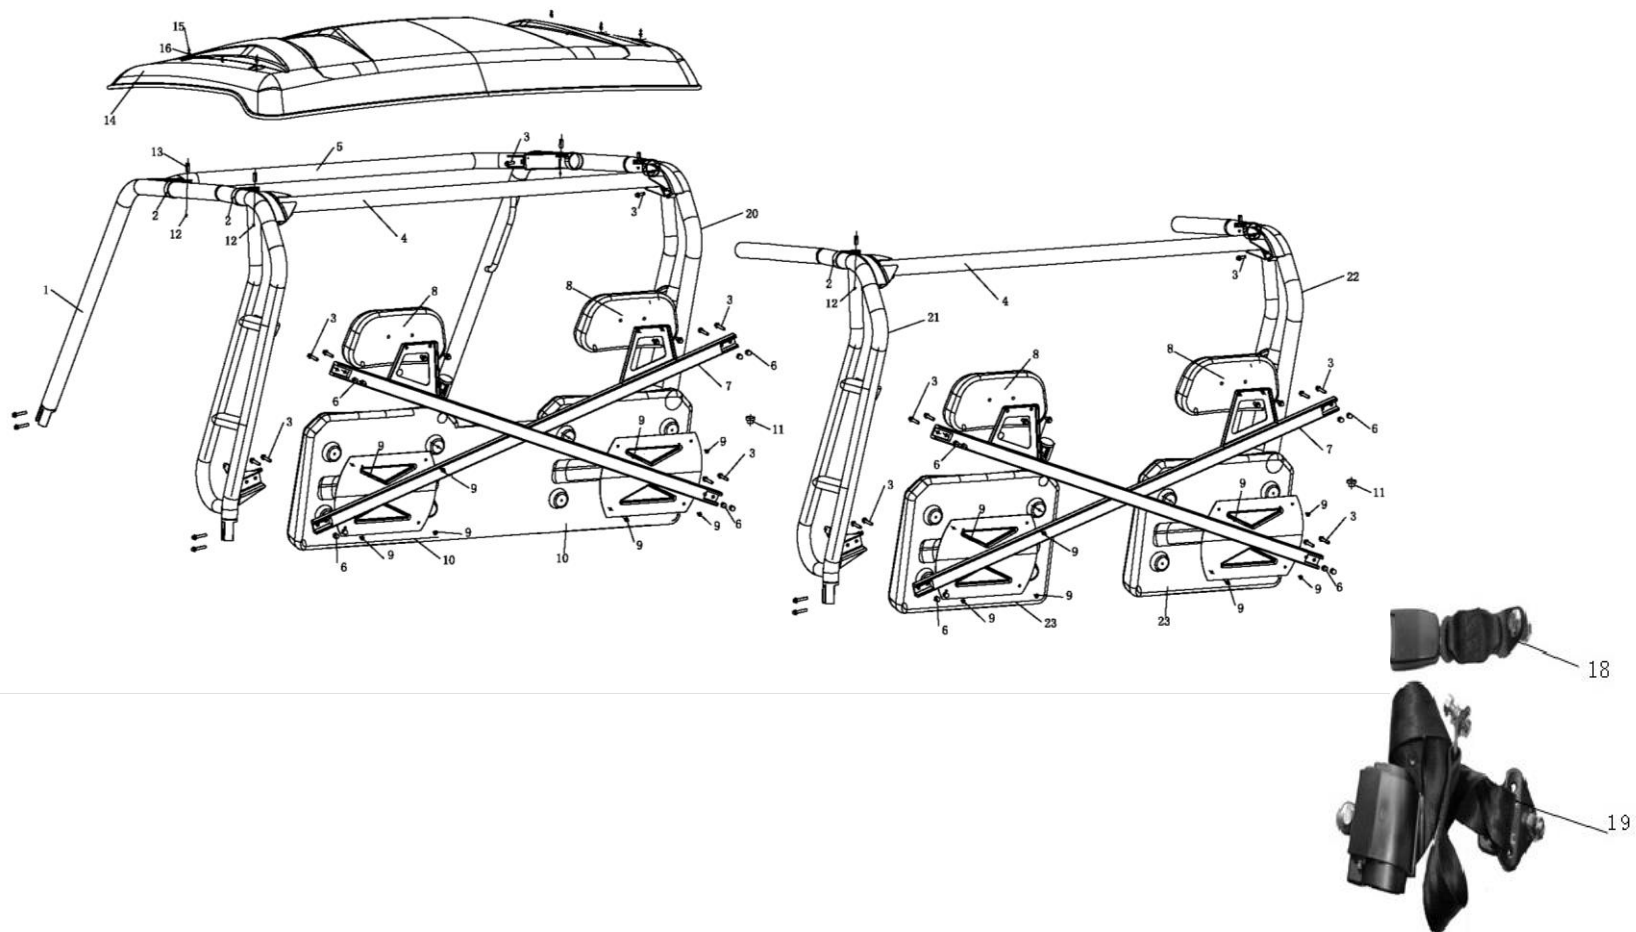

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W1202500	FRONT PROTECT POLE ASSY(L)	前龙门框组件 (左)	1	XY1100UEL
2	W1202030	HOOP (ϕ 45)	抱箍 (ϕ 45)	6	
3	GB/T 5787 M8 $\times$ 16	BOLT, FLANGE (M8 $\times$ 16)	六角法兰面螺栓 (M8 $\times$ 16)	32	
4	W1202040	REAR THWARTWISE PIPE	龙门框后横管组件	2	
5	W1202050	FRONT BENT PIPE	龙门框前弯管组件	1	
6	GB/T 923 M8	CAP NUT (M8)	盖形螺母 (M8)	16	
7	W1204010	BACKREST PIPE	靠背固定管组件	2	
8	A1213010	HEADREST	头靠	4	
9	GB/T 818 M5 $\times$ 20	SCREW (M5 $\times$ 20)	十字盘头螺栓 (M5 $\times$ 20)	16	
10	W1212050	BACKREST	长靠背	2	
11	W1112050	RUBBER, STORE BOX	置物箱卡块	4	
12	GB/T 923 M6	CAP NUT (M6)	盖形螺母 (M6)	6	
13	W1202060	CENTER SPACER, HOOP	抱箍隔套	6	
14	W1106020	CEILING	顶棚	1	
15	GB/T 5787 M6 $\times$ 55	BOLT, FLANGE (M6 $\times$ 55)	六角法兰面螺栓 (M6 $\times$ 55)	6	
16	GB/T 95 6	WASHER (ϕ 6 $\times$ ϕ 12 $\times$ 2)	平垫片 (ϕ 6 $\times$ ϕ 12 $\times$ 2)	6	
17	GB/T 70.1 M10 $\times$ 30	BOLT (M10 $\times$ 30)	内六角圆柱头螺栓 (M10 $\times$ 30)	12	
18	L1222020	LOCK CATCH, SAFETY BELT	安全带锁扣	4	配螺母2个
19	L1111011	SAFETY BELT ASSY	安全带总成	4	配螺母4个
20	W1202510	FRONT PROTECT POLE ASSY(R)	前龙门框组件 (右)	1	XY1100UEL
21	W1202520	REAR PROTECT POLE ASSY(L)	后龙门框组件 (左)	1	XY1100UEL


22	W1202530	REAE PROTECT POLE ASSY(R)	后龙门框组件（右）	1	XY1100UEL
23	W1212060	BACKREST	靠背	2	
24					

F09 刹车、油门踏板总成 BRAKE、THROTTLE PEDAL ASSY

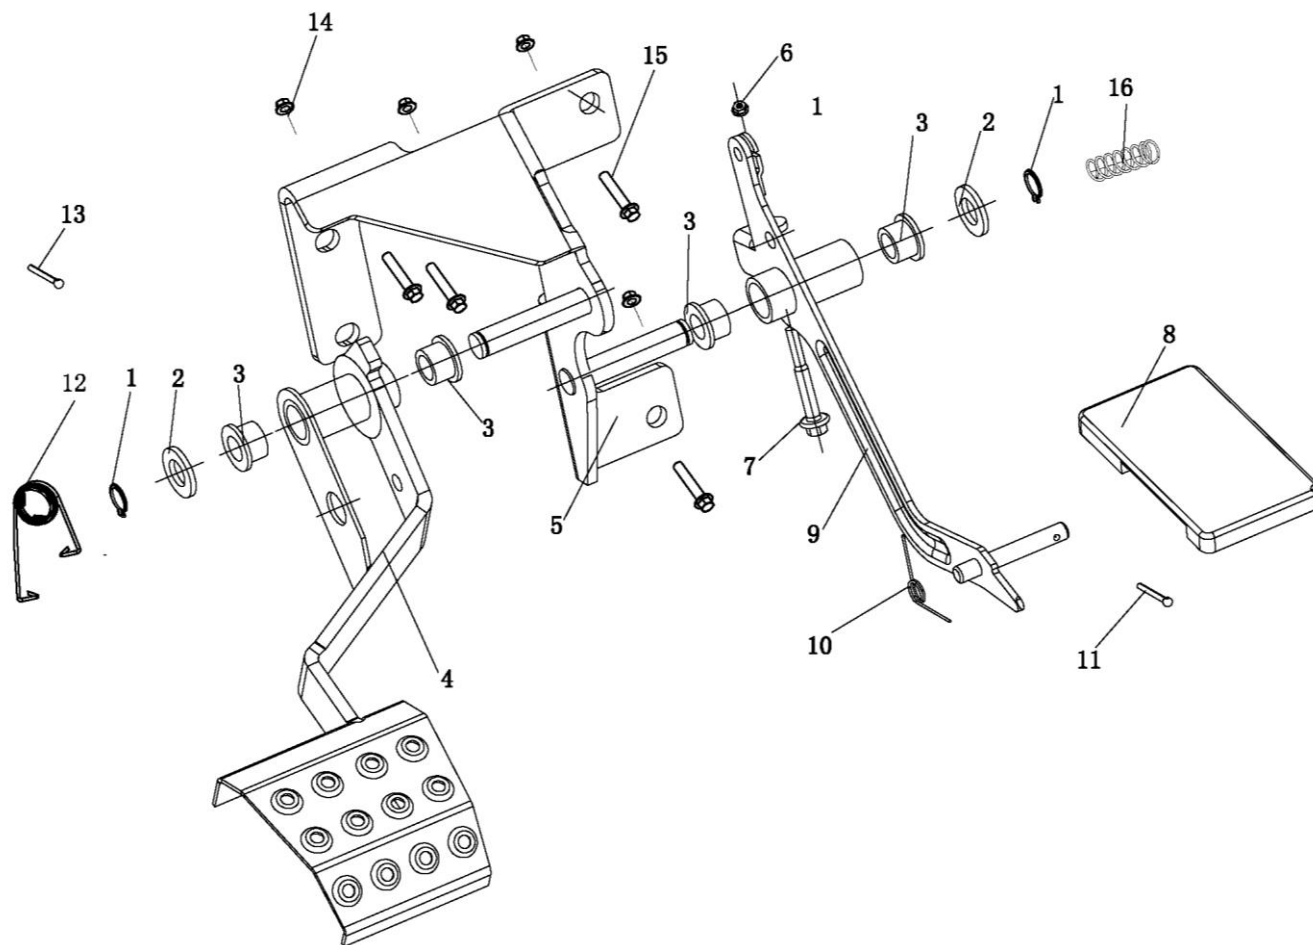

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W0806040	"E" CLAMP SPRING (Φ 12)	E形卡簧 (Φ 12)	2	
2	GB/T 95 12	WASHER (Φ 12×Φ 24×2)	平垫片 (Φ 12×Φ 24×2)	2	
3	W0806030	SPACER BUSH (NYLON)	尼龙小隔套	4	
4	W0806010	BRAKE PEDAL ASSY	刹车固定板组件	1	
5	W0806020	HOLDER, BRAKE AND THROTTLE	油门刹车安装座组件	1	
6	GB/T 6187.1 M6	NUT, FLANGE (M6)	六角法兰面螺母 (M6)	1	
7	GB/T 5787 M6×60	BOLT, FLANGE (M6×60)	六角法兰面螺栓 (M6×60)	1	
8	W0109010	COVER BOARD, CTHROTTLE PEDAL	油门踏板	1	
9	W0109050	CTHROTTLE PEDAL ASSY	油门固定板组件	1	
10	L0810042	TORSION SPRING (SMALL)	扭簧 (小)	1	
11	GB/T 91 2.5×20	COTTER PIN (2.5×20)	开口销 (2.5×20)	1	
12	W1216070	TORSION SPRING (BIG)	扭簧 (大)	1	
13	GB/T 91 2.0×16	COTTER PIN (2.0×16)	开口销 (2.0×16)	1	
14	GB/T 6187.1 M10×1.25	LOCKNUT, FLANGE (M10×1.25)	六角法兰面自锁螺母 (M10×1.25)	4	
15	GB/T 16674.2 M10×1.25×25	BOLT, FLANGE (M10×1.25×25)	六角法兰面螺栓 (M10×1.25×25)	4	
16	W0806050	EXTENSION SPRING	刹车回位弹簧	1	
17					
18					
19					
20					
21					
22					
23					
24					

F10 制动系统 BRAKE SYSTEM

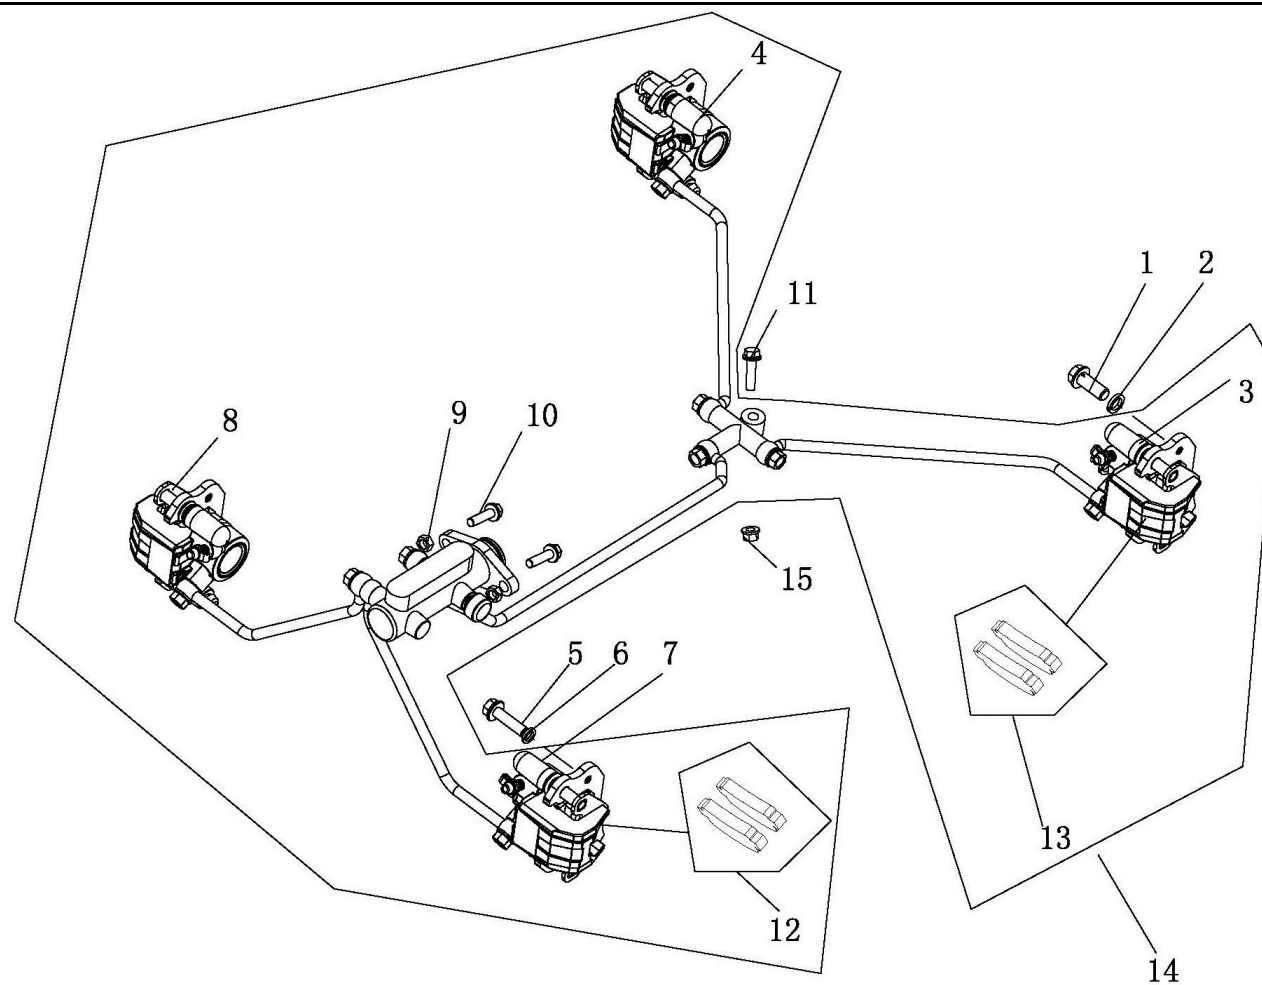


CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION(CN)	Q' TY	REMARKS
1	GB/T 5787 M10×1.25×25	BOLT, FLANGE (M10×1.25×25)	六角法兰面螺栓 (M10×1.25×25)	4	
2	GB/T 93 10	SPRING WASHER (Φ 10)	弹簧垫片 (Φ 10)	8	
3	91501011	LEFT CALIPER, REAR BRAKE	后左制动钳体	1	
4	91501010	RIGHT CALIPER, REAR BRAKE	后右制动钳体	1	
5	GB/T 5787 M10×1.25×20	BOLT, FLANGE (M10×1.25×20)	六角法兰面螺栓 (M10×1.25×20)	4	
6	GB/T 93 10	SPRING WASHER (Φ 10)	弹簧垫片 (Φ 10)	8	
7	91501009	RIGHT CALIPER, FRONT BRAKE	前制动右钳体	1	
8	91501008	LEFT CALIPER, FRONT BRAKE	前制动左钳体	1	
9	GB/T 6170 M10	NUT (M10)	六角螺母 (M10)	2	厂家自带
10	GB/T 5787 M10×20	BOLT, FLANGE (M10×20)	六角法兰面螺栓 (M10×20)	2	
11	GB/T 5787 M8×30	BOLT, FLANGE (M8×30)	六角法兰面螺栓 (M8×30)	1	
12	91501005	FRONT BRAKE PAD	前制动蹄片	4	
13	91501006	REAR BRAKE PAD	后制动蹄片	4	
14	W0801010	BRAKE CALIPER ASSY	制动器总成	1	
14	W0801020	BRAKE CALIPER ASSY	制动器总成	1	XY1100UEL
15	GB/T 6170 M8	NUT (M8)	六角螺母 (M8)	1	
16					

This technical drawing is an exploded view of a mechanical assembly, likely a cable-operated control system. The components are numbered 1 through 24. The main assembly consists of a bracket (1) with mounting holes (7), a cable (8) with a handle (9), a cable (17) with a handle (9), and a cable (16) with a handle (9). The bracket (1) is secured by screws (2) and pins (3). A plate (5) is attached to the bracket (1) with screws (4). A lever (10) is connected to the bracket (1) and the cable (16) via a pin (11) and a bush (12). The lever (10) is also secured by a screw (13) and a pin (14). A cable (15) is connected to the lever (10) and the cable (16) via a pin (11) and a bush (12). The cable (16) is secured by a screw (13) and a pin (14). A cable (17) is connected to the bracket (1) and the cable (16) via a pin (11) and a bush (12). The cable (17) is secured by a screw (13) and a pin (14). A cable (8) is connected to the bracket (1) and the cable (16) via a pin (11) and a bush (12). The cable (8) is secured by a screw (13) and a pin (14). A cable (9) is connected to the bracket (1) and the cable (16) via a pin (11) and a bush (12). The cable (9) is secured by a screw (13) and a pin (14). A cable (21) is connected to the bracket (1) and the cable (16) via a pin (11) and a bush (12). The cable (21) is secured by a screw (13) and a pin (14). A cable (22) is connected to the bracket (1) and the cable (16) via a pin (11) and a bush (12). The cable (22) is secured by a screw (13) and a pin (14). A cable (23) is connected to the bracket (1) and the cable (16) via a pin (11) and a bush (12). The cable (23) is secured by a screw (13) and a pin (14). A cable (24) is connected to the bracket (1) and the cable (16) via a pin (11) and a bush (12). The cable (24) is secured by a screw (13) and a pin (14).

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	00810010	HANDLE BRAKE	手刹手柄	1	
2	GB/T 5787 M8×30	BOLT, FLANGE (M8×30)	六角法兰面螺栓 (M8×30)	2	
3	GB/T 5787 M8×25	BOLT, FLANGE (M8×25)	六角法兰面螺栓 (M8×25)	1	
4	GB/T 818 M2×16	SCREW(M2×16)	十字盘头螺栓(M2×16)	2	
5	W1005050	HANDBRAKE SWITCH	手制动开关	1	
6	GB/T 6170 M2	NUT (M2)	外六角螺母(M2)	2	
7	GB/T 6187.1 M8	LOCKNUT, FLANGE (M8)	六角法兰面自锁螺母 (M8)	6	
8	W0810030	CABLE, PARKING	驻车拉索组件	1	
8	W0810031	CABLE, PARKING	驻车拉索组件	1	XY1100UEL
9	W0810040	CABLE, PARKING	手刹线回位弹簧	1	
10	W0303030	GEARCHANGE HANDLE	排档把手柄组件	1	
11	W0806030	SPACER BUSH(NYLON)	尼龙小隔套	2	
12	W0303040	PIN, GEARSHIFT CABLE	排档拉索固定柱销	1	
13	GB/T 95 12	WASHER(Φ 12×Φ 24×2)	平垫片(Φ 12×Φ 24×2)	2	
14	W0806040	"E" CLAMP SPRING(Φ 12)	E形卡簧(Φ 12)	2	
15	GB/T 91 2.5×20	COTTER PIN (2.5×20)	开口销 (2.5×20)	1	
16	W0303050	GEARSHIFT CABLE	排档拉索组件	1	
16	W0303051	GEARSHIFT CABLE	排档拉索组件	1	XY1100UEL
17	W0109020	THROTTLE CABLE	油门拉索组件	1	
17	W0109021	THROTTLE CABLE	油门拉索组件	1	XY1100UEL
18	W0303080	GEARSHIFT ROCKER	换档摇臂组件	1	
19	GB/T 95 10	WASHER(Φ 10×Φ 20×2)	平垫片(Φ 10×Φ 20×2)	1	


20	GB/T 6187.1 M10×1.25	LOCKNUT, FLANGE (M10×1.25)	六角法兰面自锁螺母 (M10×1.25)	1	
21	GB/T 5787 M6×25	BOLT, FLANGE (M6×25)	六角法兰面螺栓 (M6×25)	2	
22	W0303060	KNUCKLE BEARING, GEARSHIFT	换档关节轴承	1	
23	GB/T 6187.1 M6	LOCKNUT, FLANGE (M6)	六角法兰面自锁螺母 (M6)	3	
24	GB/T 5787 M6×30	BOLT, FLANGE (M6×30)	六角法兰面螺栓 (M6×30)	1	

F12 车架 FRAME

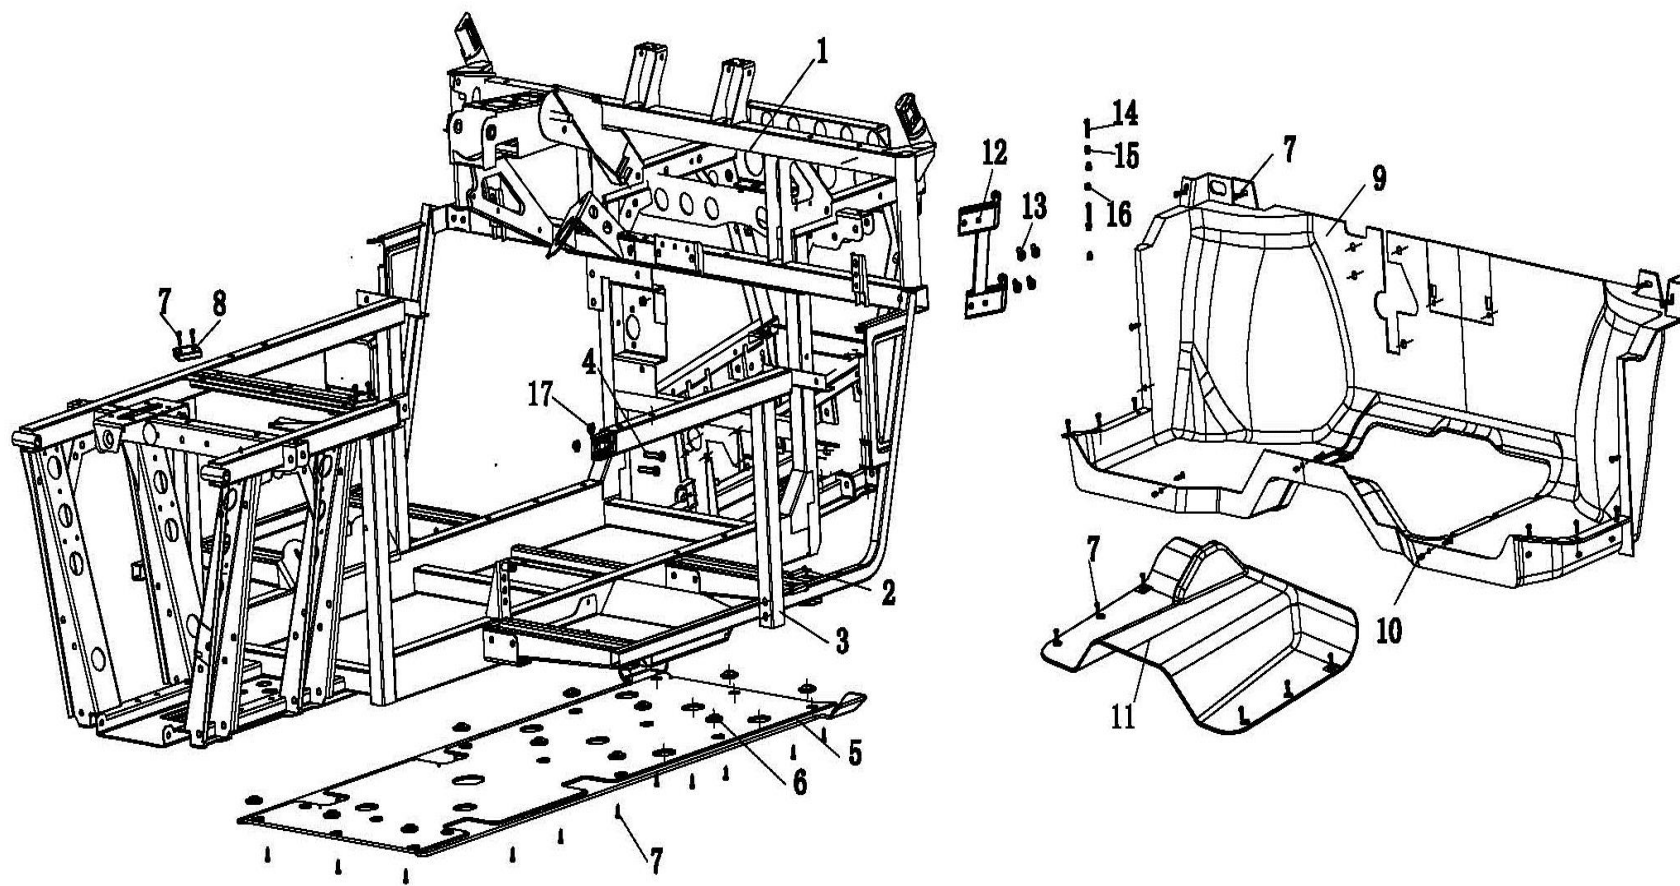


CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W1201000	FRAME	车架总成	1	
2	GB/T 5787 M8×25	BOLT, FLANGE (M8×25)	六角法兰面螺栓 (M8×25)	2	
3	W1201010	STAND PIPE, REAR UPPER FRAME	后上框架立管组件	1	
4	GB/T 70.1 M10×30	BOLT (M10×1.25×30)	内六角圆柱头螺栓 (M10×1.25×30)	2	
5	W1211020	FRONT PROTECT SOLEPLATE	前保护底板	1	
6	W1211030	WASHER	异型垫片	12	
7	GB/T 819.1 M6×16	BOLT (M6×16)	大扁头螺栓 (M6×16)	35	
8	W1216280	RUBBER WASHER	后货箱缓冲胶	2	
9	W1215010	GUARD, MAIN FRAME (I)	前地台板	1	
10	9401-060003	NUT, CLIP (M6)	夹片螺母 (M6)	9	
11	W1211010	TRANSMISSION SHAFT COVER BOARD	传动轴盖板	1	
12	W1217080	GEMEL, HALF DOOR	半门合页	2	
13	GB/T 5787 M6×20	BOLT, FLANGE (M6×20)	六角法兰面螺栓 (M6×20)	8	
14	GB/T 5787 M8×55	BOLT, FLANGE (M8×55)	六角法兰面螺栓 (M8×55)	4	
15	A1217180	SPACER BUSH	半门安装隔套	8	500UTV
16	GB/T 6187.1 M8	LOCKNUT, FLANGE (M8)	六角法兰面自锁螺母 (M8)	20	
17	GB/T 6187.1 M10×1.25	LOCKNUT, FLANGE (M10×1.25)	六角法兰面自锁螺母 (M10×1.25)	2	
18					
19					
20					
21					
22					

F13 车架 FRAME

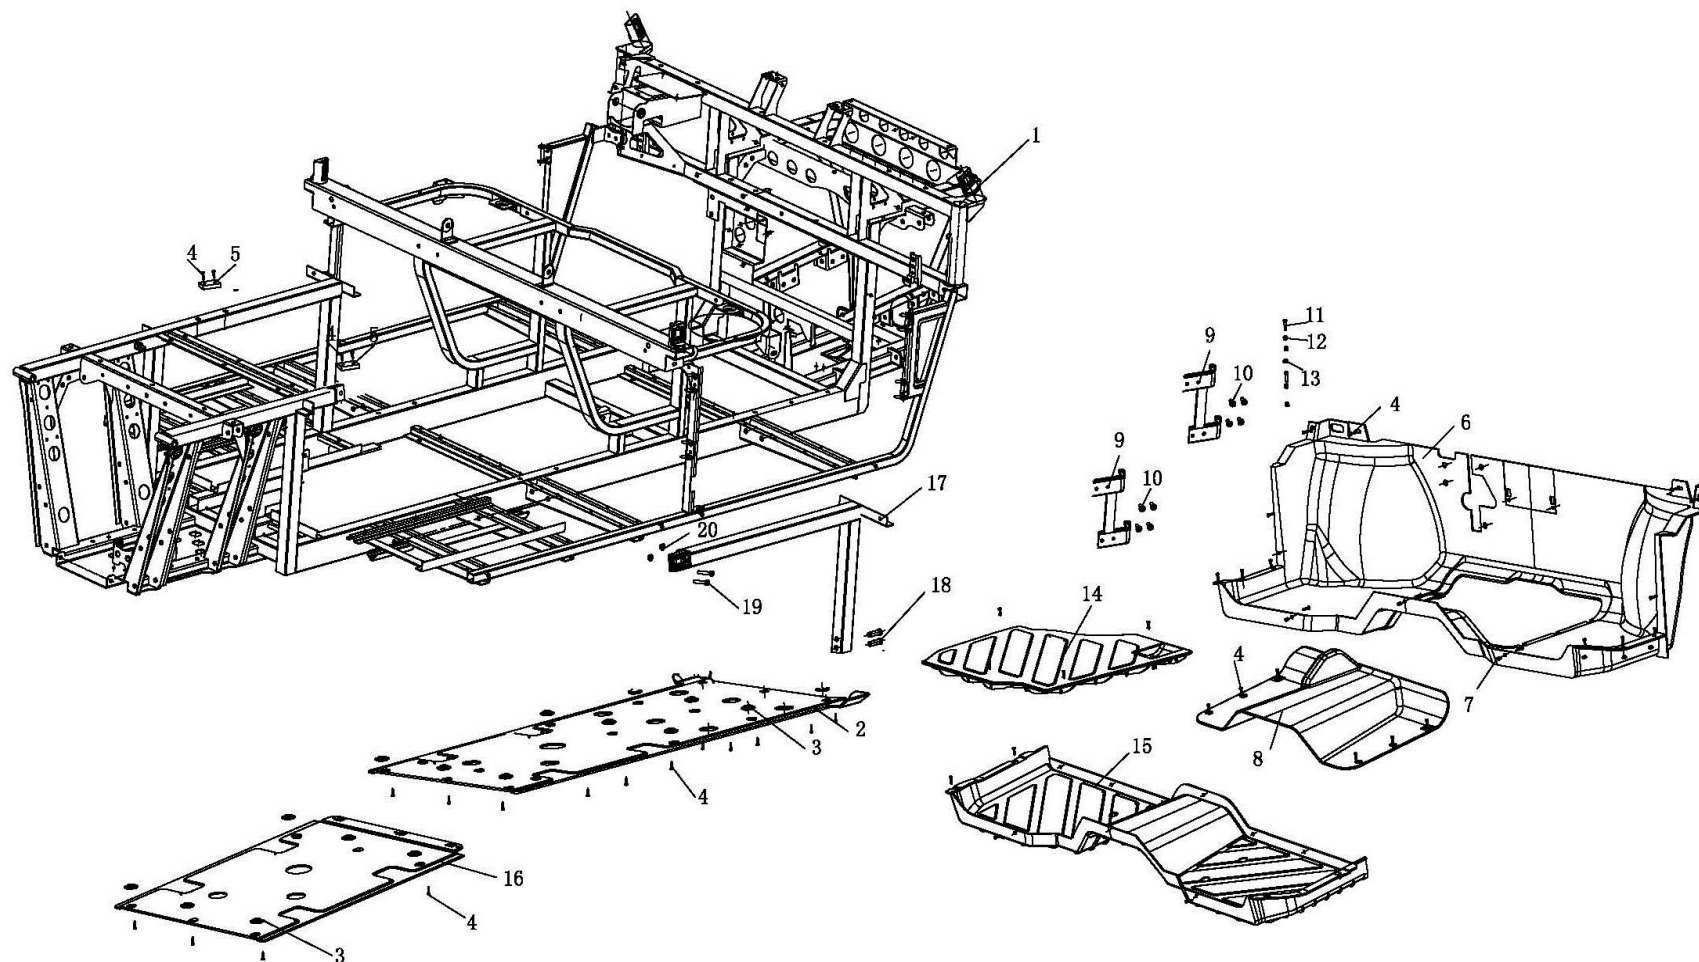


CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W1201500	FRAME	车架总成	1	XY1100UEL
2	W1211020	FRONT PROTECT SOLEPLATE	前保护底板	1	
3	W1211030	WASHER	异型垫片	18	
4	GB/T 819.1 M6×16	BOLT(M6×16)	大扁头螺栓(M6×16)	50	
5	W1216280	RUBBER WASHER	后货箱缓冲胶	2	
6	W1215010	MAIN FRAME. BOARDING	前地台板	1	
7	9401-060003	NUT, CLIP (M6)	夹片螺母(M6)	9	
8	W1211010	TRANSMISSION SHAFT COVER BOARD	传动轴盖板	1	
9	W1217080	GEMEL, HALF DOOR	半门合页	2	
10	GB/T 5787 M6×20	BOLT, FLANGE (M6×20)	六角法兰面螺栓 (M6×20)	8	
11	GB/T 5787 M8×55	BOLT, FLANGE (M8×55)	六角法兰面螺栓 (M8×55)	4	
12	A1217180	SPACER BUSH	半门安装隔套	8	
13	GB/T 6187.1 M8	LOCKNUT, FLANGE(M8)	六角法兰面自锁螺母(M8)	8	
14	W1214060	HIGHER FLOOR PLATE	地板增高板	1	
15	W1214030	FLOOR BOARD	后地台板	1	
16	W1211040	REAR PROTECT SOLEPLATE	后保护底板	1	
17	W1201010	STAND PIPE, REAR UPPER FRAME	后上框架立管组件	1	
18	GB/T 5787 M8×25	BOLT, FLANGE (M8×25)	六角法兰面螺栓 (M8×25)	2	
19	GB/T 70.1 M10×30	BOLT (M10×1.25×30)	内六角圆柱头螺栓 (M10×1.25×30)	2	
20	GB/T 6187.1 M10×1.25	LOCKNUT, FLANGE (M10×1.25)	六角法兰面自锁螺母 (M10×1.25)	2	
21					
22					

F14 前座椅总成 FRONT SEAT

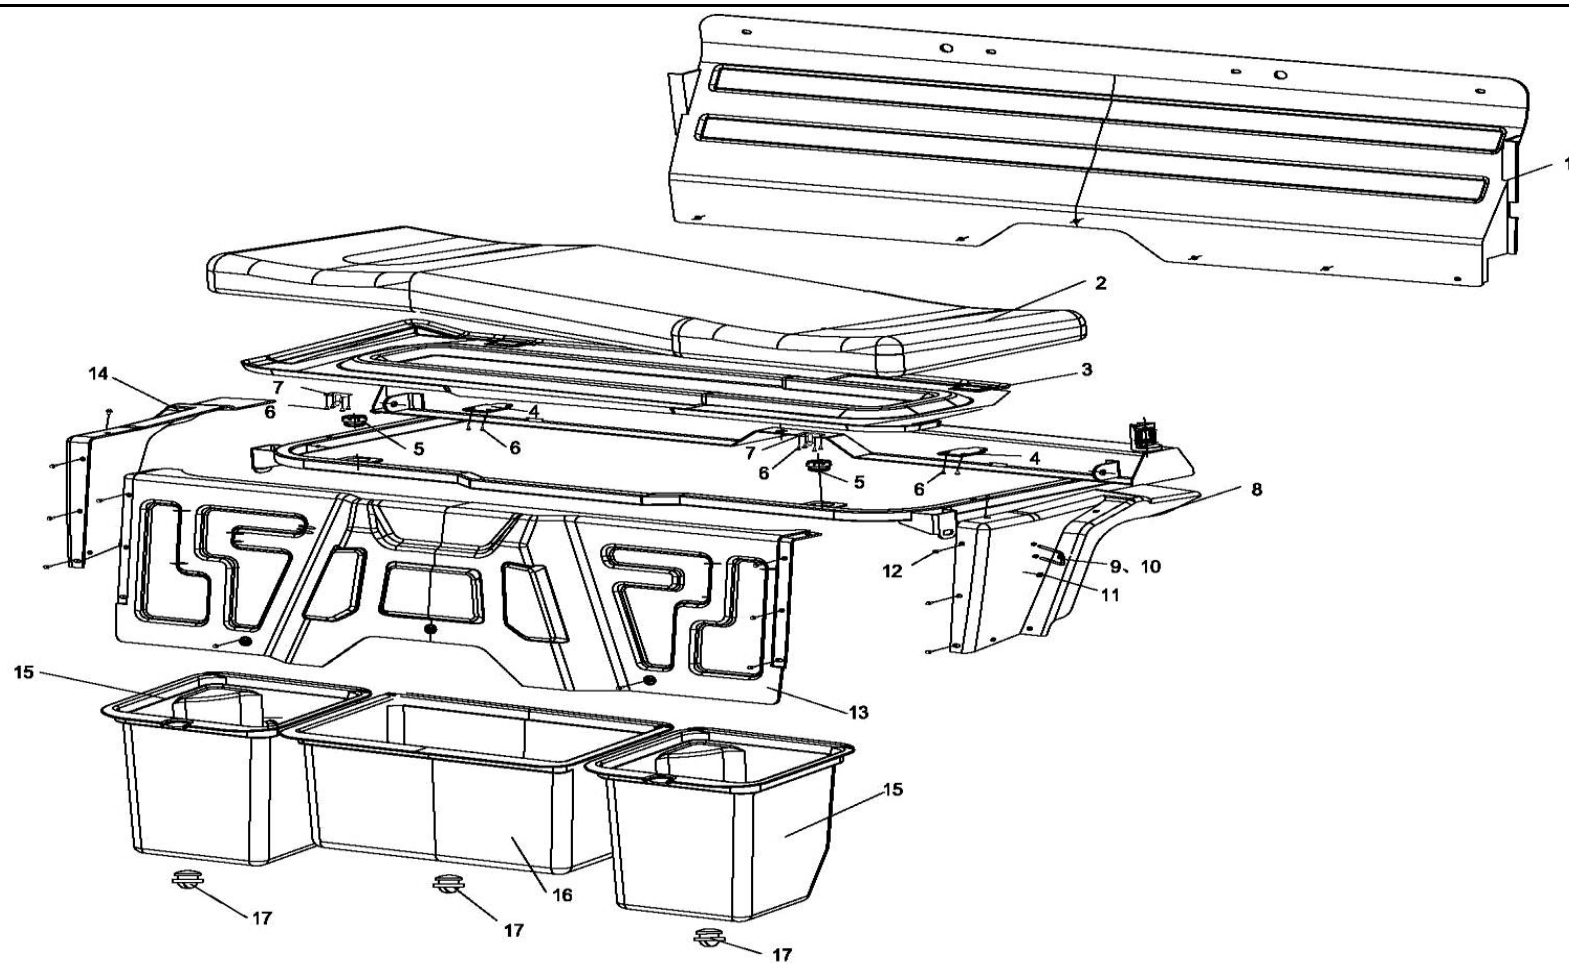


CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W1206070	SEAT REAR COVER	座椅后围板	1	XY1100UEL
2	W1212040	SEAT CUSHION (B)	后座垫	1	
3	W1207020	SEAT MOTHERBOARD	座垫大底板	2	
4	W1212070	SEAT BOARD	座椅卡板	2	
5	J1205020	CARD BLOCK, SEAT	座椅卡块	2	
6	GB/T 845 ST 4.8×16	TAPPING SCREW (ST 4.8×16)	十字半圆头自攻螺钉	12	
7	K1212010	HOLDER, SEAT	座椅固定组件	2	
8	W1206010	LEFT COVER, SEAT	座椅框左侧板	1	
9	A1217010	"U" HOOK LOCK	半门U型锁钩	2	
10	GB/T 6187.1 M8	NUT, FLANGE (M8)	六角法兰面螺母 (M8)	8	
11	H1209130	RUBBER CUSHION	油箱圆形缓冲胶垫	2	
12	9305-080200	EXPANSION SCREW (M8×20)	塑料膨胀螺丝 (M8×20)	31	
13	W1206050	SEAT FRONT COVER	座椅框前围板	1	
14	W1206020	RIGHT COVER, SEAT	座椅框右侧板	1	
15	W1206060	STORE BOX (S)	座椅下小置物箱	2	
16	W1206080	STORE BOX (B)	座椅下大置物箱	1	
17	W1112060	LOCKER LEAK PLUGGING BLOCK	置物箱漏水堵块	3	
18					
19					
20					
21					
22					

F15 后座椅总成 REAR SEAT

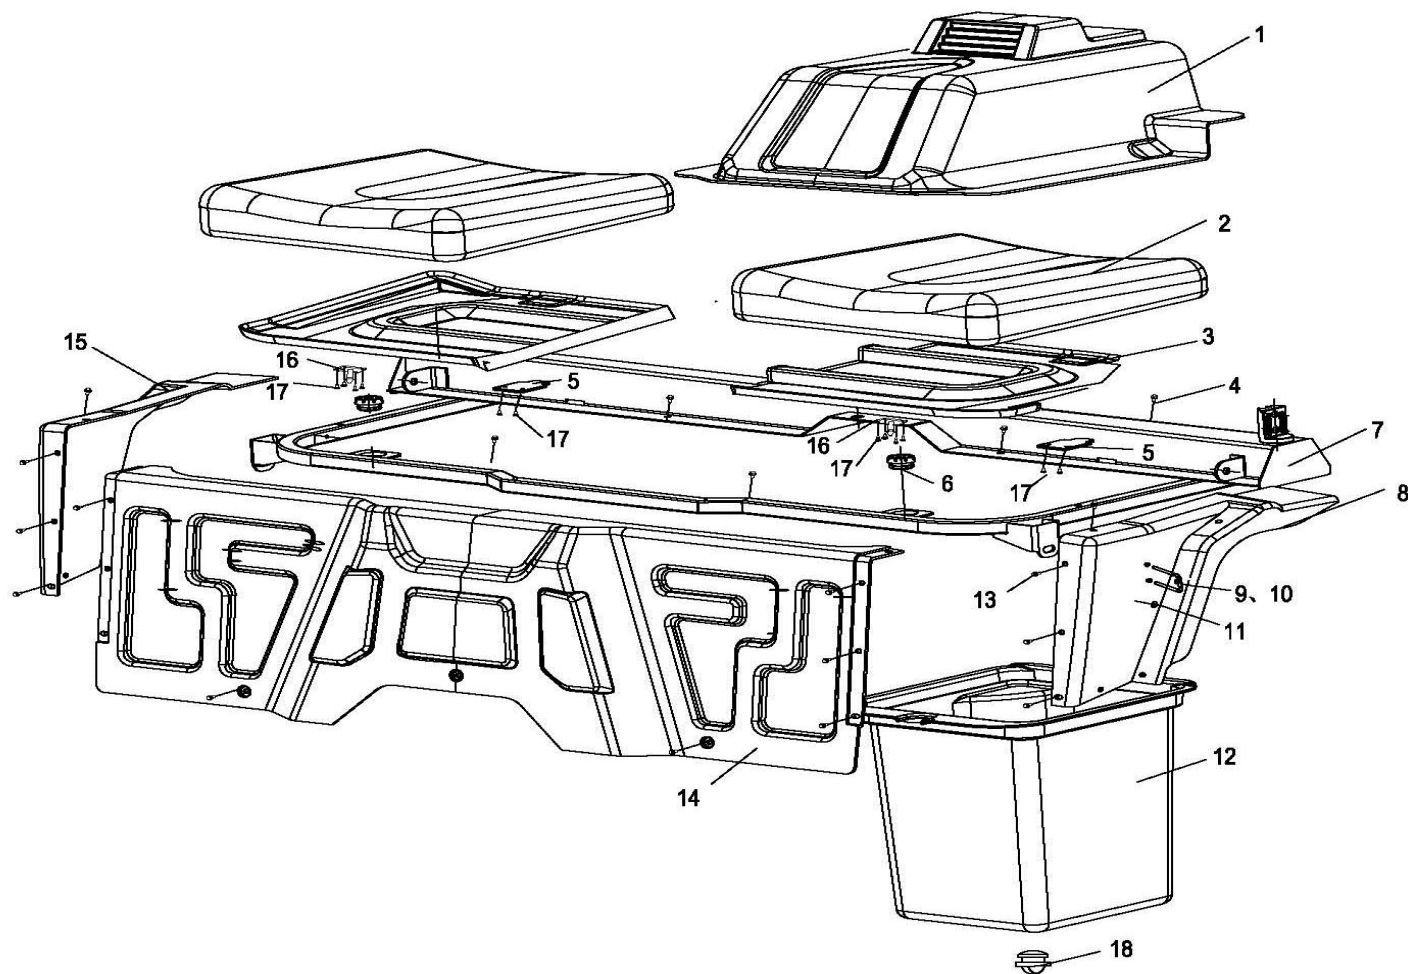


CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W1113010	ENGINE COVER (UPPER)	发动机上罩	1	
2	W1212020	REAR SEAT CUSHION	座垫	2	
3	W1207010	SEAT MOTHERBOARD (S)	座垫小底板	2	
4	GB/T 5787 M8×16	BOLT, FLANGE (M8×16)	六角法兰面螺栓 (M8×16)	10	
5	W1212070	SEAT BOARD	座椅卡板	2	
6	J1205020	CARD BLOCK, SEAT	座椅卡块	2	
7	W1205010	SEAT FRAME ASSY	后座椅框组件	1	
8	W1206010	LEFT COVER, SEAT	座椅框左侧板	1	
9	A1217010	"U" HOOK LOCK	半门U型锁钩	2	500UTV
10	GB/T 6187.1 M8	NUT, FLANGE (M8)	六角法兰面螺母 (M8)	8	
11	H1209130	RUBBER CUSHION	油箱圆形缓冲胶垫	2	500ATV
12	W1206060	STORE BOX (S)	座椅下小置物箱	1	
13	9305-080200	EXPANSION SCREW (M8×20)	塑料膨胀螺丝 (M8×20)	20	
14	W1206050	SEAT FRONT COVER	座椅框前围板	1	
15	W1206020	RIGHT COVER, SEAT	座椅框右侧板	1	
16	K1212010	HOLDER, SEAT	座椅固定组件	2	
17	GB/T 845 ST 4.8×16	TAPPING SCREW (ST 4.8×16)	十字半圆头自攻螺钉	12	
18	W1112060	LOCKER LEAK PLUGGING BLOCK	置物箱漏水堵块	1	
19					
20					
21					
22					

F16 消声器总成 MUFFLER ASSY

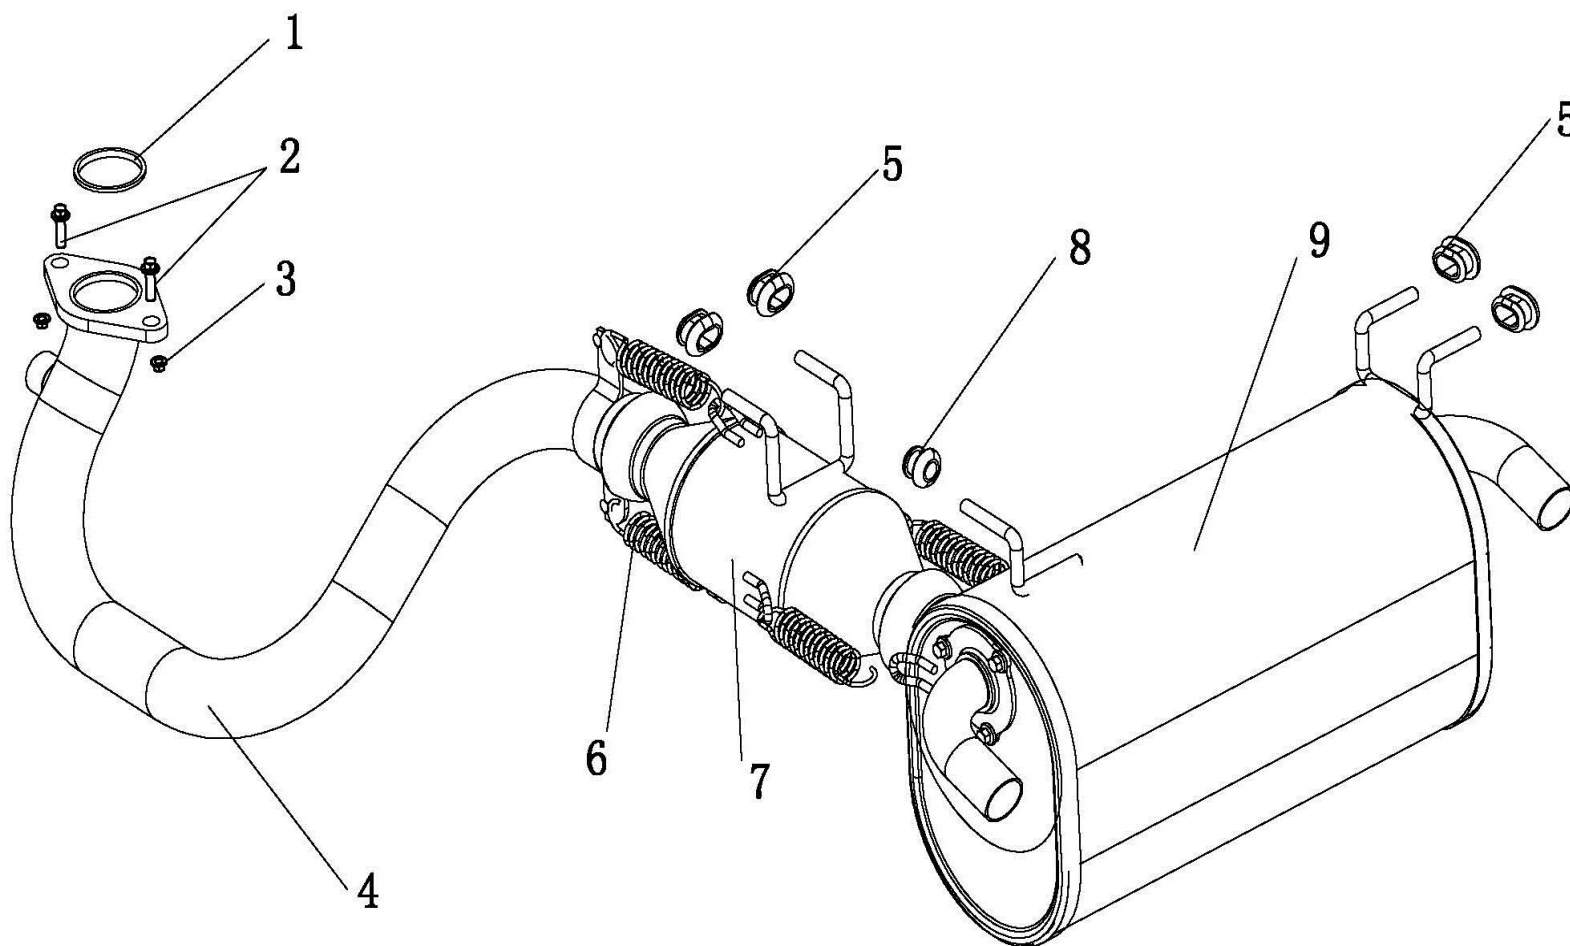


CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W0107060	SEAL RING	垫圈	1	
2	GB/T 5787 M10×30	BOLT, FLANGE (M10×30)	六角法兰面螺栓 (M10×30)	2	
3	GB/T 6177.1 M10	LOCKNUT, FLANGE (M10)	六角锁紧螺母 (M10)	2	
4	W0107010	EXHAUST PIPE	排气管	1	
5	W0107040	RUBBER WASHER A	消音器固定缓冲块A	4	
6	F0107050	TENSION SPRING, EXHAUST PIPE	排气管固定拉簧	4	
7	W0108010	CATALYTIC CONVERTER	触媒组件	1	
8	W0107030	RUBBER WASHER B	消音器固定缓冲块B	1	
9	W0107050	MUFFLER	消声器组件	1	
10					
11					
12					
13					
14					
15					
16					
17					
18					
19					
20					
21					
22					
23					

F17 空滤器总成 AIR FILTER

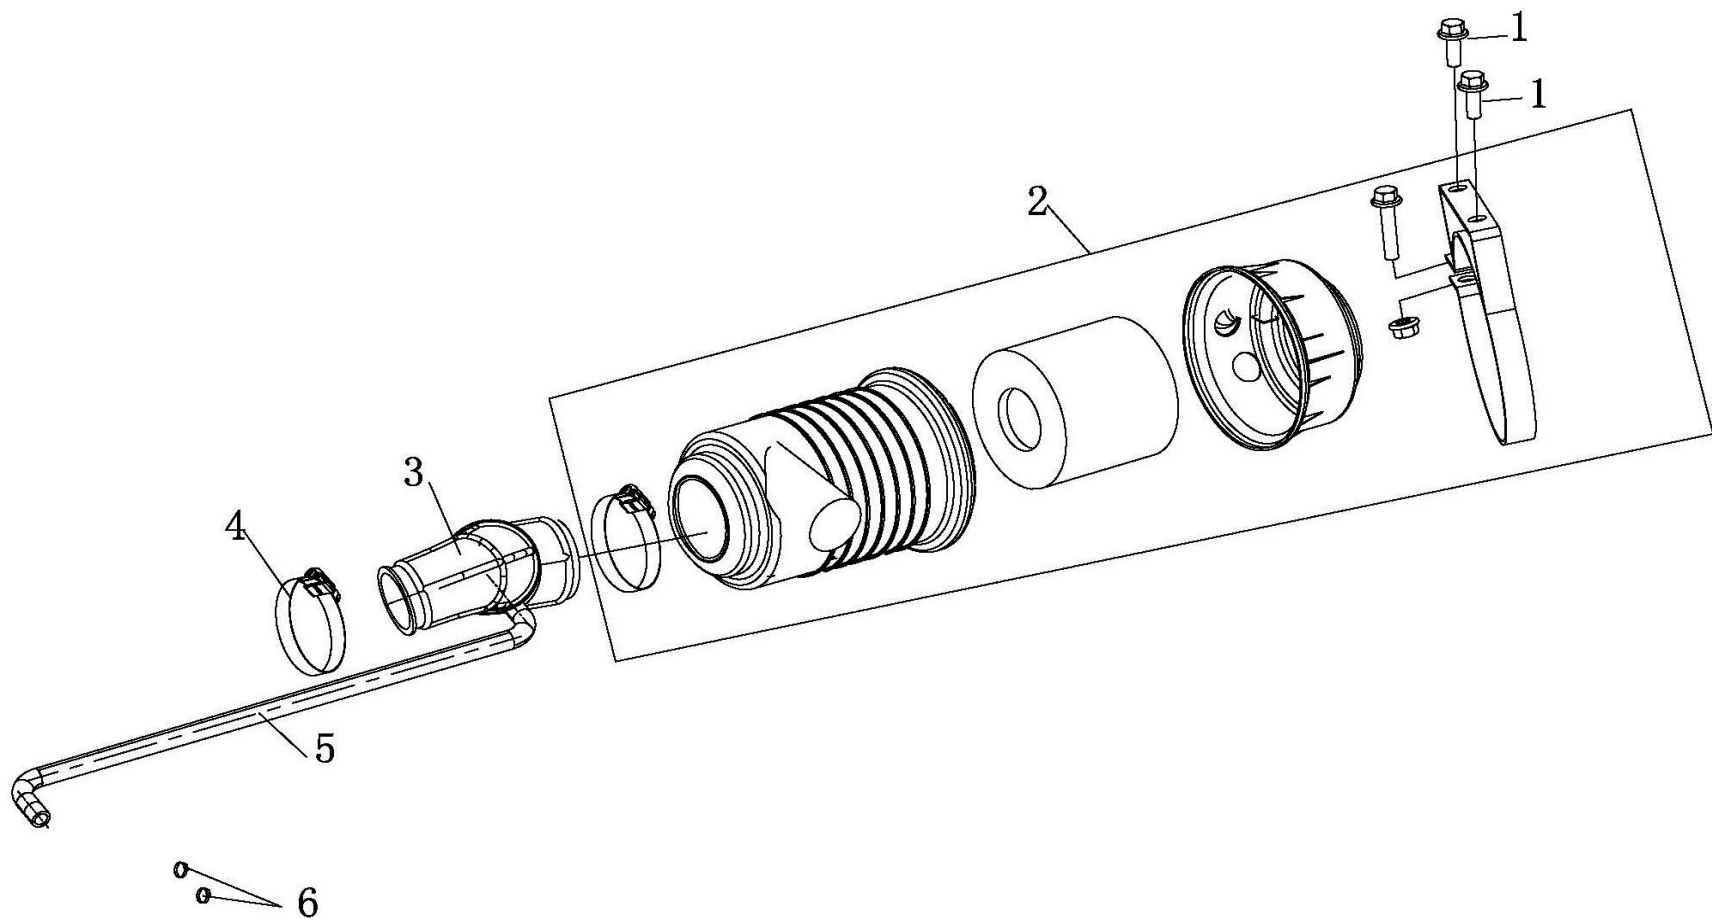

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	GB/T 5787 M8×16	BOLT, FLANGE (M8×16)	六角法兰面螺栓 (M8×16)	2	
2	W0105010	AIR FILTER	空滤器组件	1	
3	W0106010	INTAKE TUBE, AIR FILTER	空滤器进气波纹管	1	
4	9852-506205	CIRCLIP 50-62	抱箍 50-62	1	
5	W0106020	INTAKE MANIFOLD	进气歧管	1	
6	9852-200003	CLAMP (Φ 20)	卡箍 (Φ 20)	2	
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					
17					
18					
19					
20					
21					
22					


F18 冷却系统 COOLING SYSTEM

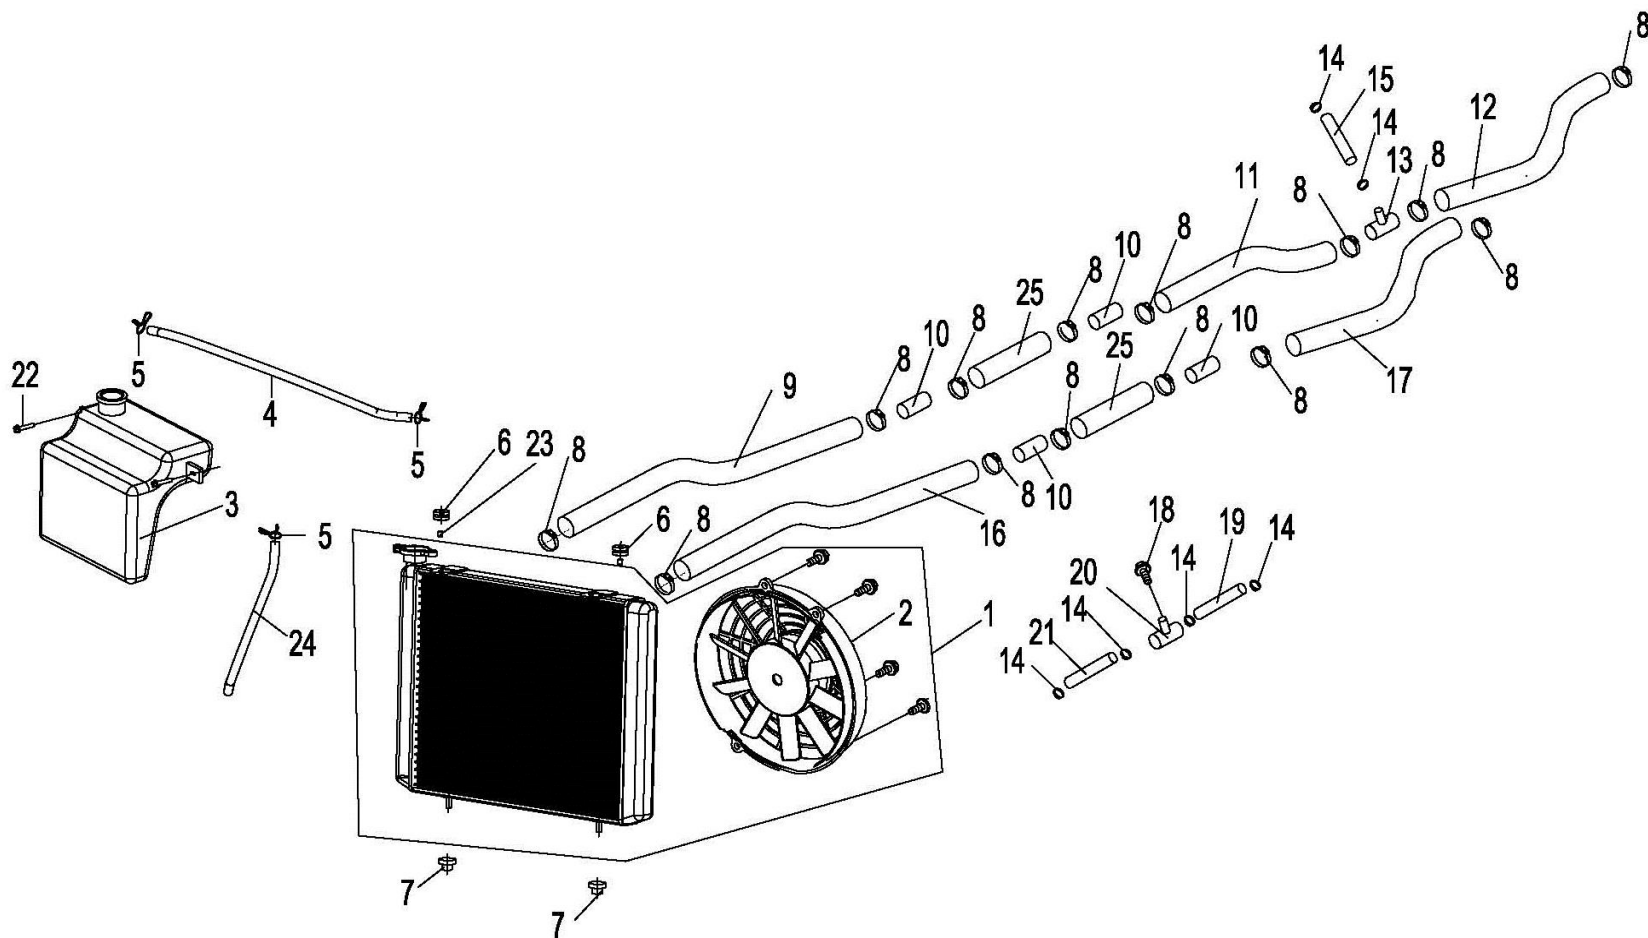

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W0202010	RADIATOR	散热器总成	1	
2	W0203020	FAN ASSY	水箱风扇组件	1	
3	W0205030	RADIATOR RESERVE	副水壶	1	
4	W0201130	WATER HOSE 1 ($\phi 6 \times \phi 10 \times 450$)	副水管1 ($\phi 6 \times \phi 10 \times 450$)	1	
5	9852-100113	CLAMP ($\phi 10$)	卡箍 ($\phi 10$)	3	
6	00202020	BUFFERING COLLAR	工字胶套	2	
7	W1112050	BUMPERBLOCK, RADIATOR	置物箱卡块	2	
8	9852-253805	CLAMP (25-38)	抱箍 (25-38)	10	XY1100UEL数量为: 14
9	W0201080	INLET PIPE, ENGINE (FRONT)	进水管前段	1	
10	W0201060	TIE-IN INTAKE PIPE	进出水管接头	2	XY1100UEL数量为: 4
11	W0201090	INLET PIPE, ENGINE (MIDDLE)	进水管中段	1	
12	W0201100	INLET PIPE, ENGINE (REAR)	进水管后段	1	
13	W0201070	T-JOINT, WATER PIPE	进出水管三通接头	1	
14	9852-131905	CLAMP (13-19)	卡箍 (13-19)	6	
15	W0201050	CYCLE PIPE (REAR)	循环管后段 ($\phi 8 \times \phi 14 \times 250$)	1	
16	W0201120	OUTLET PIPE, ENGINE (FRONT)	出水管前段	1	
17	W0201110	OUTLET PIPE, ENGINE (RAER)	出水管后段	1	
18	GB/T 5787 M6 $\times$ 16	BOLT, FLANGE (M6 $\times$ 16)	六角法兰面螺栓 (M6 $\times$ 16)	1	
19	W0201040	CYCLE PIPE (FRONT)	循环管前段 $\phi 8 \times \phi 14 \times 200$	1	
20	W0101006	EXHAUST CLIQUE	排气阀	1	
21	W0201040	CYCLE PIPE (FRONT)	循环管前段 $\phi 8 \times \phi 14 \times 200$	1	

22	GB/T 819.1 M6×12	BOLT (M6×20)	大扁头螺栓 (M6×20)	2	
23	00202030	SPACER BUSH	水箱衬套	2	
24	W0201140	WATER HOSE 2 (φ6×φ10×200)	副水管2 (φ6×φ10×200)	1	
25	70900001	PIPE, ENGINE (MIDDLE)	进出水管直管	2	XY1100UEL


F19 油箱总成 FUEL TANK

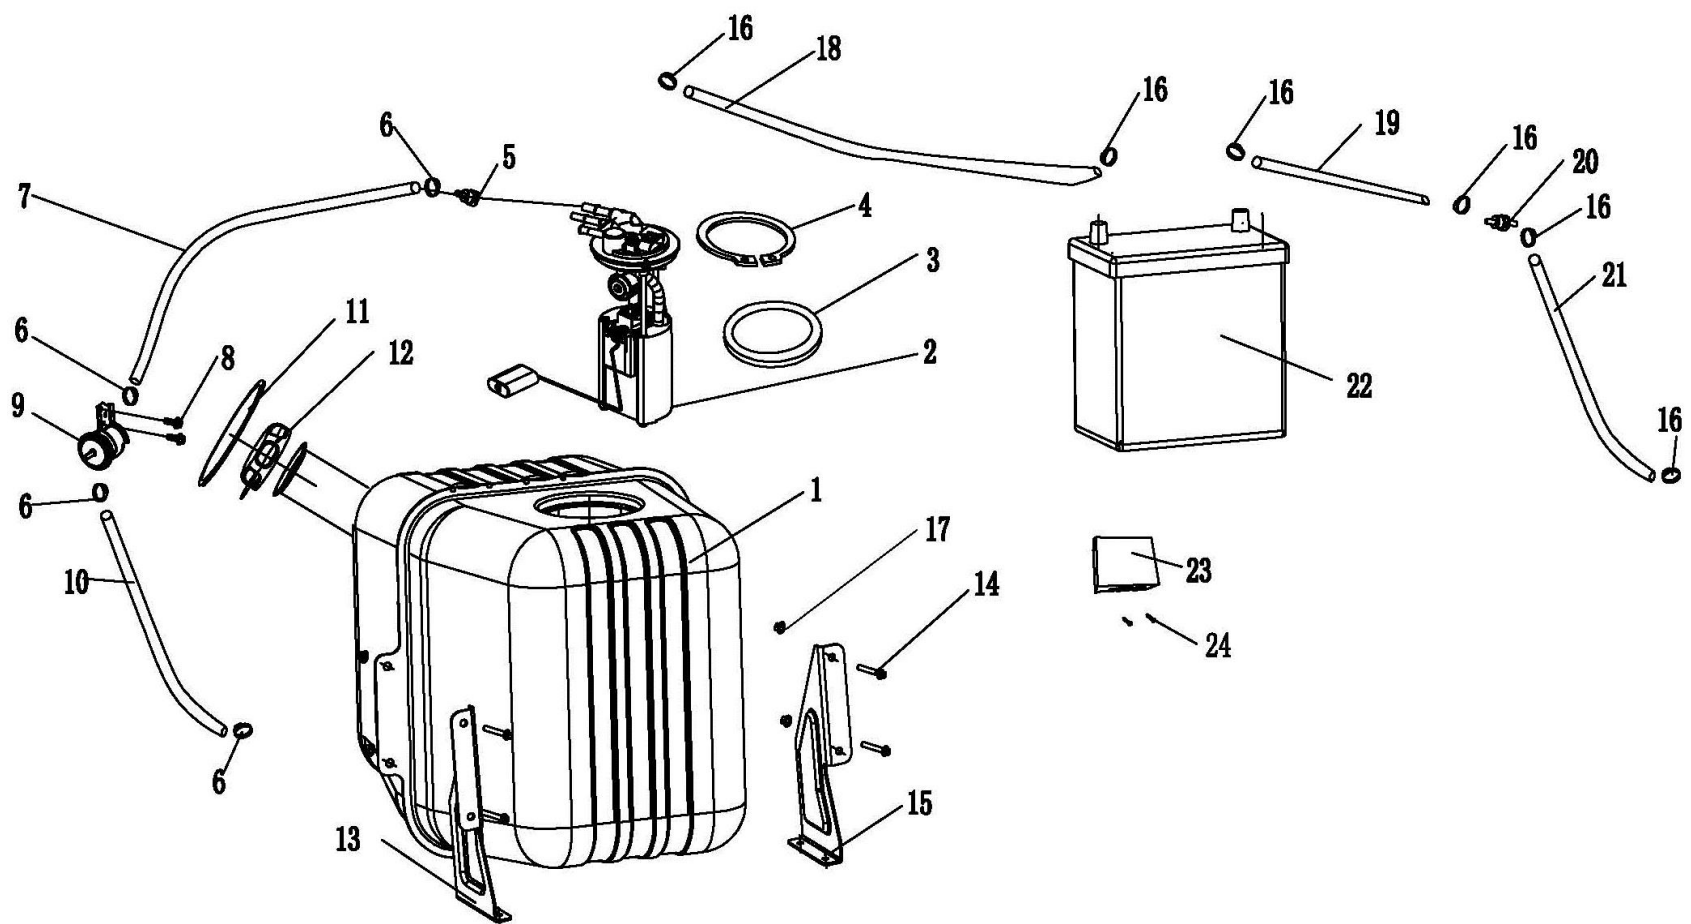

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W1209030	FUEL TANK	汽油箱	1	
2	W1209050	FUEL PUMP	汽油泵	1	
3	F1209080	“O” SEAL RING (Φ 6× Φ 100)	O型密封圈 (Φ 6× Φ 100)	1	
4	GB/T 893.1 120	HOOB (Φ 120×2)	内卡簧 (Φ 120×2)	1	
5	F1209120	JOINT, FUEL HOSE	电油泵出油管接头	1	Φ 9.49
6	9852-131905	CLAMP (13-19)	卡箍 (13-19)	4	
7	W1209080	FUEL HOSE	前端进油管	1	300mm
8	GB/T 5787 M8×16	BOLT, FLANGE (M8×16)	六角法兰面螺栓 (M8×16)	2	
9	A1209071	FUEL FILTER ASSY	汽油滤清器组件	1	
10	W1209090	FUEL HOSE	后端进油管	1	400mm
11	W1209070		油箱口防护套	1	
12	A1005051	CAP, FUEL TANK	油箱盖	1	
13	W1209040	SUPPORT, FUEL TANK (L)	油箱固定支撑板(左)	1	
14	GB/T 5787 M6×12	BOLT, FLANGE (M6×12)	六角法兰面螺栓 (M6×12)	8	
15	W1209041	SUPPORT, FUEL TANK (R)	油箱固定支撑板(右)	1	
16	9852-100113	CLAMP (Φ 10)	卡箍 (Φ 10)	6	
17	GB/T 6187.1 M6	LOCKNUT, FLANGE (M6)	六角法兰面自锁螺母 (M6)	8	
18	W1209110	INLET WINDPIPE (FRONT)	碳罐进气管前段	1	500mm
19	W1209120	INLET WINDPIPE (MIDDLE)	碳罐进气管中段	1	250mm
20	W1209100	RELAY, CARBON CANISTER	碳罐继电器	1	
21	W1209130	INLET WINDPIPE (RAER)	碳罐进气管后段	1	250mm

22	W1209140	CARBON CANISTER	碳罐	1	
23	R1600031	DEAD PLATE	碳罐吊耳	1	
24	S0501003	RIVET (5×20)	抽芯铆钉 (5×20)	2	


F20 前罩总成 FRONT COVER ASSY

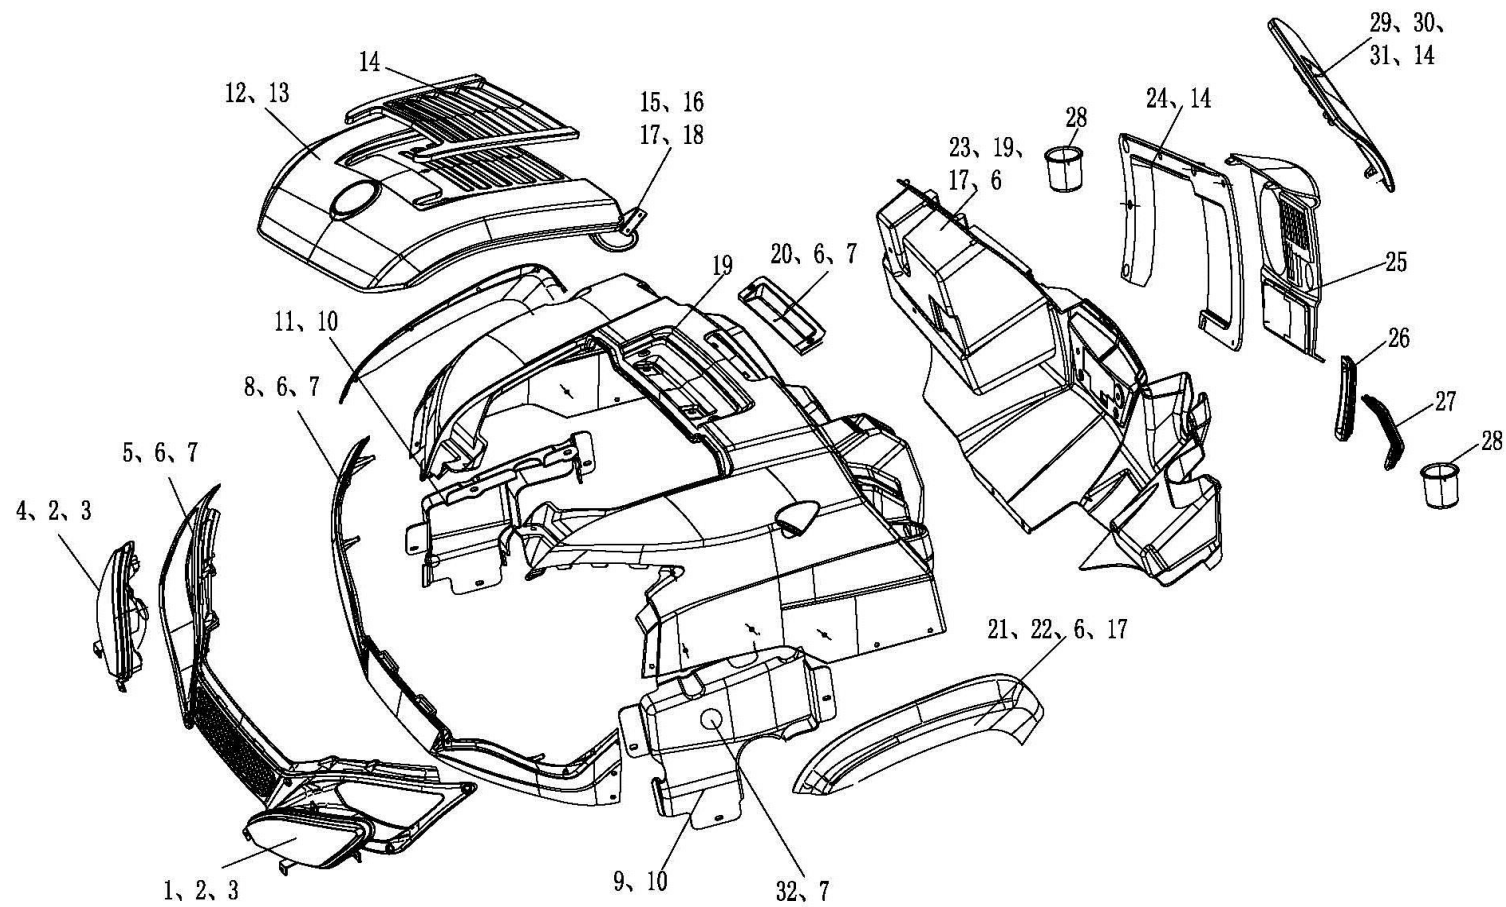

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W1008010	HEADLIGHT (L)	前大灯 (左)	1	
2	GB/T 845 ST5.2×20	TAPPING SCREW(ST5.2×20)	自攻螺钉 (ST5.2×20)	8	
3	GB/T 95 5	WASHER(Φ5×Φ10×1)	平垫片 (Φ5×Φ10×1)	8	
4	W1008020	HEADLIGHT(R)	前大灯 (右)	1	
5	W1101020	FRONT COVER, VENT GRILLE	前导流罩	1	
6	GB/T 819.1 M6×20	SCREW(M6×20)	大扁头螺栓 (M6×20)	30	
7	GB/T 6177.1 M6	NUT(M6)	六角锁紧螺母 (M6)	19	
8	W1102010	BOARDING, VENT GRILLE(FRONT)	前导流罩围板	1	
9	W1103040	FRONT MUDGUARD(R)	前右挡泥板	1	
10	9305-080200	EXPANSION SCREW(M8×20)	塑料膨胀螺丝 (M8×20)	11	
11	W1103030	FRONT MUDGUARD(L)	前左挡泥板	1	
12	W1101050	ENGINE COVER BOARD	前罩盖板	1	
13	GB/T 845 ST4.2×20	TAPPING SCREW(ST4.2×20)	自攻螺钉 (ST4.2×20)	13	
14	W1101060	ENGINE COVER BOARD DECORATE COVER	前罩盖板装饰板	1	
15	GB/T 819.1 M6×20	SCREW(M6×20)	大扁头螺栓 (M6×20)	8	
16	9011-060007	RUBBER WASHER(Φ6)	橡胶垫 (Φ6)	21	
17	W1101040	GEMEL	前盖钩形合页	2	
18	9401-060003	NUT, CLIP (M6)	夹片螺母 (M6)	13	
19	W1101080	DECORATE COVER, FRONT COVER	前罩	1	
20	W1101010	FRONT COVER	前罩装饰板	1	
21	W1103010	COVER, LEFT LINE.FR (L)	前左长轮眉	1	

22	W1103020	COVER, RIGHT LINE.FR (L)	前右长轮眉	1	
23	W1105030	SCALEBOARD, METER PANEL	仪表台下衬板	1	
24	W1112010	SEPTI-BOARD, STORE BOX	前置物箱中隔板	1	
25	W1105010	METER PANEL	仪表板	1	
26	W0303010	AIRPROOF COVER, GEARSHIFT	排档摇把密封罩	1	
27	W0810010	AIRPROOF COVER, PARKING HANDLE	驻车手柄密封罩	1	
28	L1105010	TEACUP COVER	茶杯外罩	2	借用150UTV
29	W1112070	COVER BOARD, STORE BOX	前置物箱盖板	1	
30	W1112030	PIN	锥形销	1	
31	W1112040	SUPPORT, PIN	锥形销固定板	1	
32	A1008140	REFLECTER	反光片	2	


F21 电气系统 ELECTRICAL SYSTEM

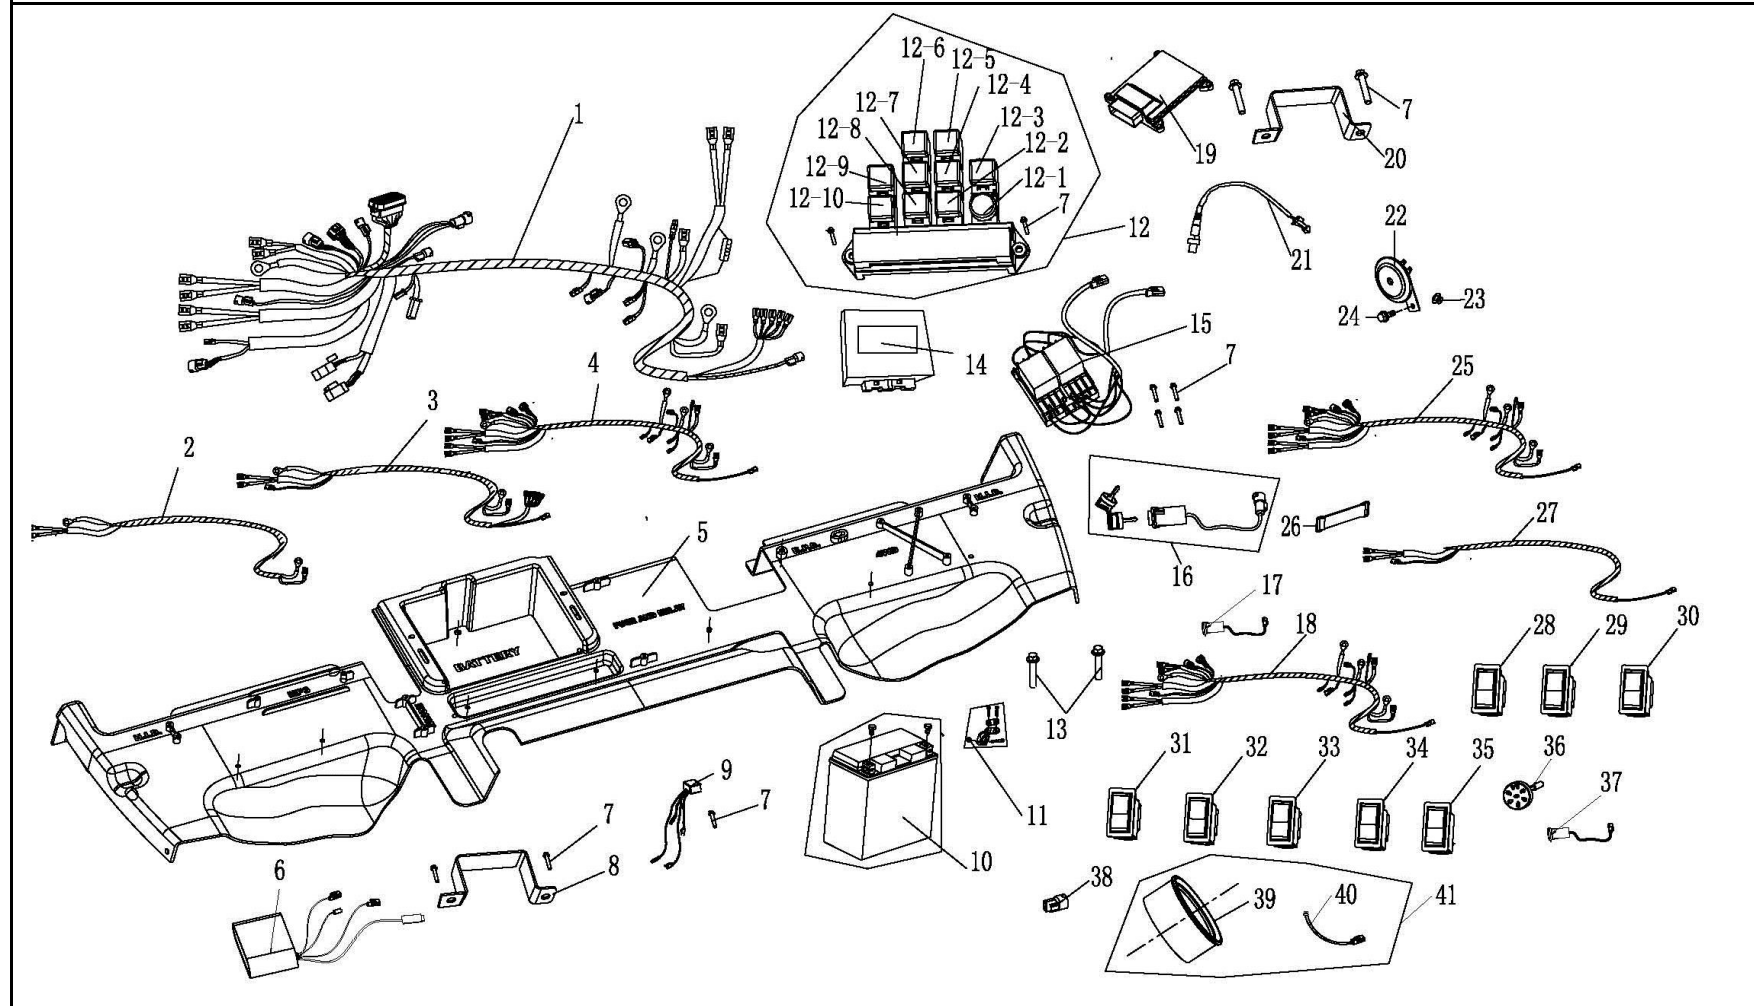

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W1001010	MAIN CABLE	电缆总成	1	
	W1001011	MAIN CABLE	电缆总成	1	XY1100UEL
2	W1001020	WIRE, STARTING MOTOR	起动电机线	1	
	W1001021	WIRE, STARTING MOTOR	起动电机线	1	XY1100UEL
3	W1001030	EARTH WIRE (L)	地线 (长)	1	
4	W1001040	EARTH WIRE (S)	地线 (短)	1	
5	W1011020	ELECTRICAL FIX BOARD	前电器安装板	1	
6	A1006030	MP3 PLAYER	MP3组件	1	
7	GB/T 845 ST4. 2×20	TAPPING SCREW (ST4. 2×20)	自攻螺钉 (ST4. 2×20)	13	
8	W1006020	HOOP	MP3抱箍	1	
9	W1011010	WINCH RELAY	绞盘继电器	1	
10	A1002010	BATTERY	蓄电池组件	1	12V 36Ah
11	A1002040	BATTERY, CLAMP	蓄电池桩头夹子	2	
12	W1015010	FUSE BOX	保险盒	1	
12-1	91501012	ORGAN, FLASH	闪光灯	1	
12-2	Q0500060	sSTARTER ASSISTANT RELAY	起动辅助继电器	1	
12-3	Q0500060	BUGLE RELAY	喷油器继电器	1	
12-4	Q0500060	STARTER ASSISTANT RELAY	起动辅助继电器	1	
12-5	Q0500060	SPOT LIGHT RELAY	射灯继电器	1	
12-6	Q0500060	WIND RELAY	暖风继电器	1	
12-7	Q0500060	LIGHTING RELAY	灯光继电器	1	
12-8	Q0500060	PUMP RELAY	油泵继电器	1	

12-9	Q0500060	EPS RELAY	转向助力继电器	1	
12-10	Q0500060	FAN RELAY	风扇继电器	1	
13	GB/T 5787 M6×25	BOLT, FLANGE (M6×25)	六角法兰面螺栓 (M6×25)	2	
14	01011090	EPS CONTROLLER	EPS控制器	1	


F22 电气系统 ELECTRICAL SYSTEM

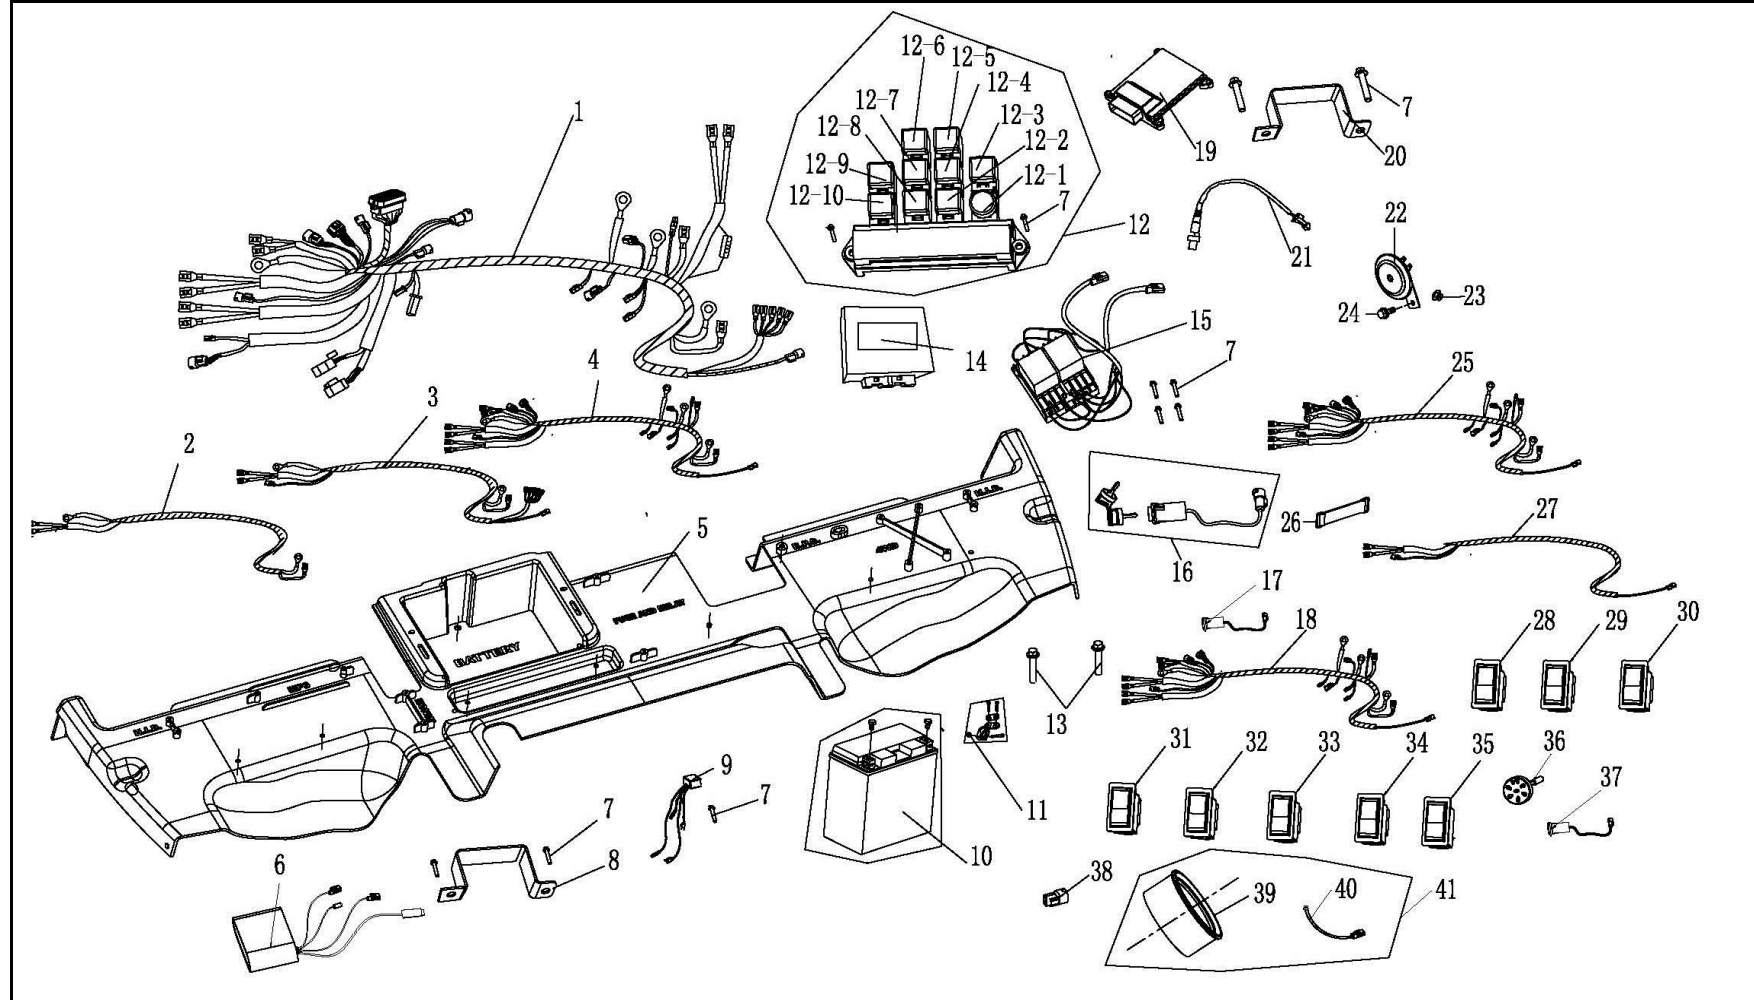

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
15	M0501028	CONTROLLER, 2WD & 4WD	二四驱控制器	1	
16	A1005050	IGNITION SWITCH	点火开关总成	1	
17	A1014010	CIGARETTE LIGHT	点烟器总成	1	
18	F1001050	ENGINE CABLE	发动机电缆	1	发动机附件
19	F1012020	ECU CONTROLLER	ECU控制器	1	
20	W0102050	HOOP, ECU CONTROLLER	ECU控制器抱箍	1	
21	F1012030	OXYGEN SENSOR	氧传感器	1	发动机附件
22	A1007010	HORN	电喇叭总成	1	
23	GB/T 6177.1 M8	NUT (M8)	六角锁紧螺母 (M8)	1	
24	GB/T 5787 M8×20	BOLT (M8×20)	六角法兰面螺栓 (M8×20)	1	
25	W1001060	GARGO BOX CABLE	后货箱电缆	1	
26	W1002040	BAND, BATTERY	电池拉带	1	
27	W1013030	METER CABLE	仪表线束	1	
28	Q0700042	HORN SWITCH	喇叭开关	1	
29	Q0700030	2WD & 4WD SWITCH	二四驱转换开关	1	
30	Q0700024	HEADLIGHT SWITCH	大灯开关	1	
31	Q0700025	DIPPED HEADLIGHT/HIGH BEAM SWITCH	远近光转换开关	1	
32	Q0700022	SWITCH, TURN LIGHT	转向灯开关	1	
33	A1010030	WINCH SWITCH	绞盘开关	1	
34	Q0700026	WARNING SWITCH	双跳开关	1	
35	Q0700023	WIPER SWITCH	雨刮开关	1	
36	A1006060	MP3 SWITCH	MP3播放器开关	1	

37	H1001050	POWER OUTPUT	电源输出插座	1	
38	A1011120	SEVERANCE DIODE	隔离二极管	1	
39	W1013031	METER	仪表组件	1	
40	K1001070	SWITCH OF METER ADJUST	仪表调节开关总成	1	
41	W1013010	METER ASSY	仪表总成	1	
42					
43					
44					
45					
46					
47					
48					


F23 后货箱 I CARGO BOX ASSY I

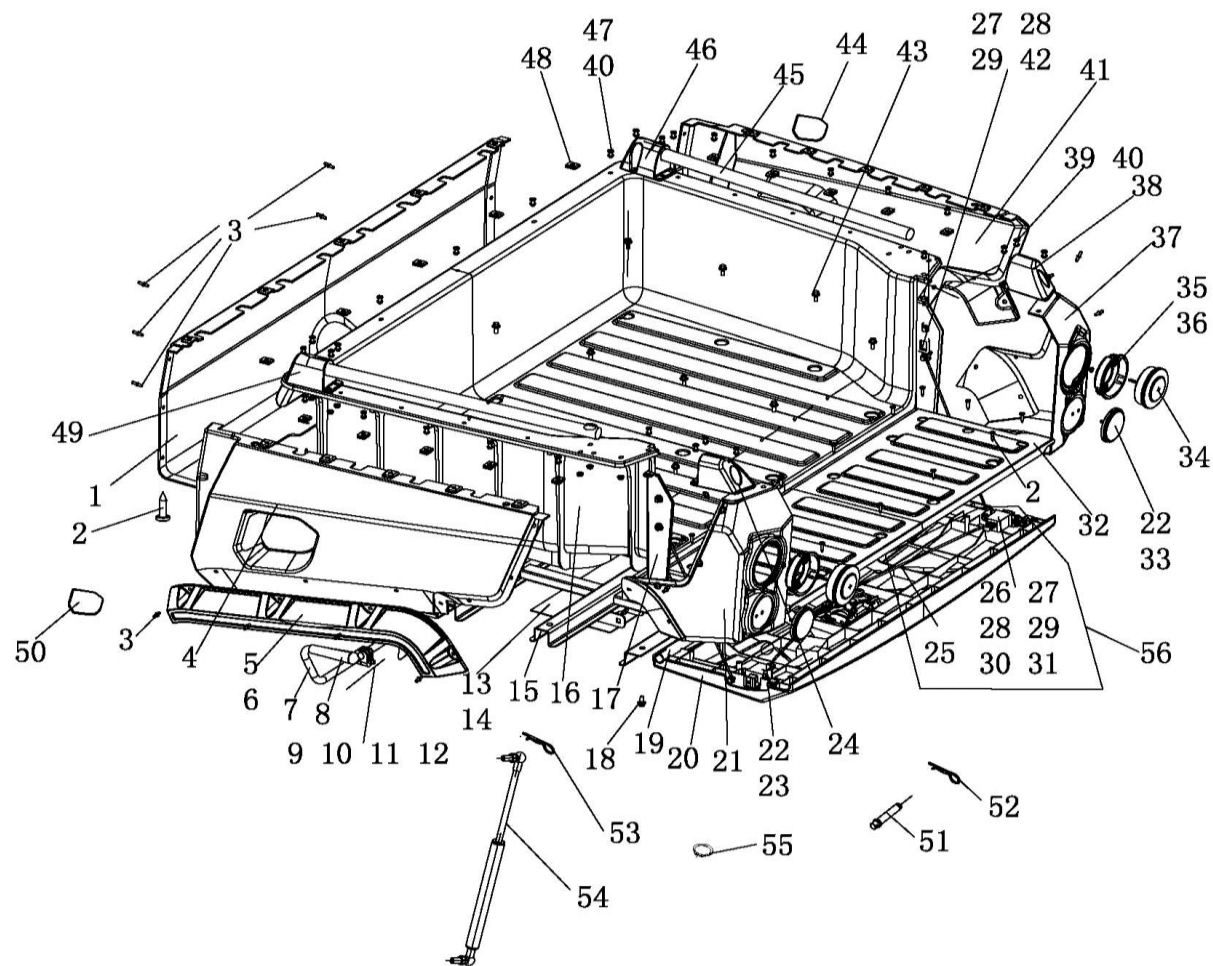

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W1216010	DECORATING COVER, CARGO BOX	货箱前装饰板	1	
2	GB/T 845 ST5.2×20	TAPPING SCREW(ST5.2×20)	自攻螺钉 (ST5.2×20)	22	
3	9305-080200	EXPANSION SCREW(M8×20)	塑料膨胀螺丝 (M8×20)	22	
4	W1216020	LEFTWARD COVER, CARGO BOX	货箱左侧板	1	
5	W1208010	FENDER, CARGO BOX (L)	后长轮眉 (左)	1	
6	W1208020	FENDER, CARGO BOX (R)	后长轮眉 (右)	1	
7	W1216040	TIPPING ROCKER	后货箱翻斗摇杆组件	1	
8	W1216050	ROCKER COVER, TIPPING	后货箱翻斗摇杆套	2	
9	W1216060	POTHOOK SEAT	货箱挂钩固定座	8	
10	W1216070	TORSION SPRING (BIG)	扭簧 (大)	1	
11	GB/T 5787 M8×45	BOLT, FLANGE (M8×45)	六角法兰面螺栓 (M8×45)	4	
12	GB/T 6187.1 M8	LOCKNUT, FLANGE(M8)	六角法兰面自锁螺母(M8)	4	
13	W1216080	HEAT INSULATION BOARD	后货箱底部隔热板	1	
14	GB/T867-86-5×20	RIVET(5×20)	抽芯铆钉 (5×20)	8	
15	W1216090	CARGO BOX FRAMRE	后货箱骨架组件	1	
16	W1216100	DECORATING COVER, CARGO BOX	货箱内饰板	1	
17	W1216110	HALF DOOR FRAMRE	后货箱半门固定框组件	1	
18	GB/T 5787 M8×12	BOLT, FLANGE (M8×12)	六角法兰面螺栓 (M8×12)	2	
19	W1216120	ROTATE PIN PIPE	货箱转销管	1	
20	W1216130	BOARD, CARGO BOX DOOR	货箱门外板	1	
21	W1216210	REAR CORNER COVER,CARGO BOX (R)	货箱后角罩 (右)	1	
22	W1216430	HANDLE, CARGO BOX DOOR	后货箱门拉手	1	

23	GB/T 6187.1 M6	LOCKNUT, FLANGE (M6)	六角法兰面螺母 (M6)	4	
24	W1216250	REAR HEIGHTEN WASHER (R)	货箱后增高块 (左)	1	
25	W1216384	TIE ROD, HALF DOOR	后货箱拉杆	2	
26	W1216383	LOCK, GARGO BOX (L)	后货箱门锁 (左)	1	
27	GB/T 5787 M8×20	BOLT, FLANGE (M8×20)	六角法兰面螺栓 (M8×20)	4	
28	W1216390	PIN	后货箱门拉索固定销	4	


F24 后货箱 II CARGO BOX ASSY II

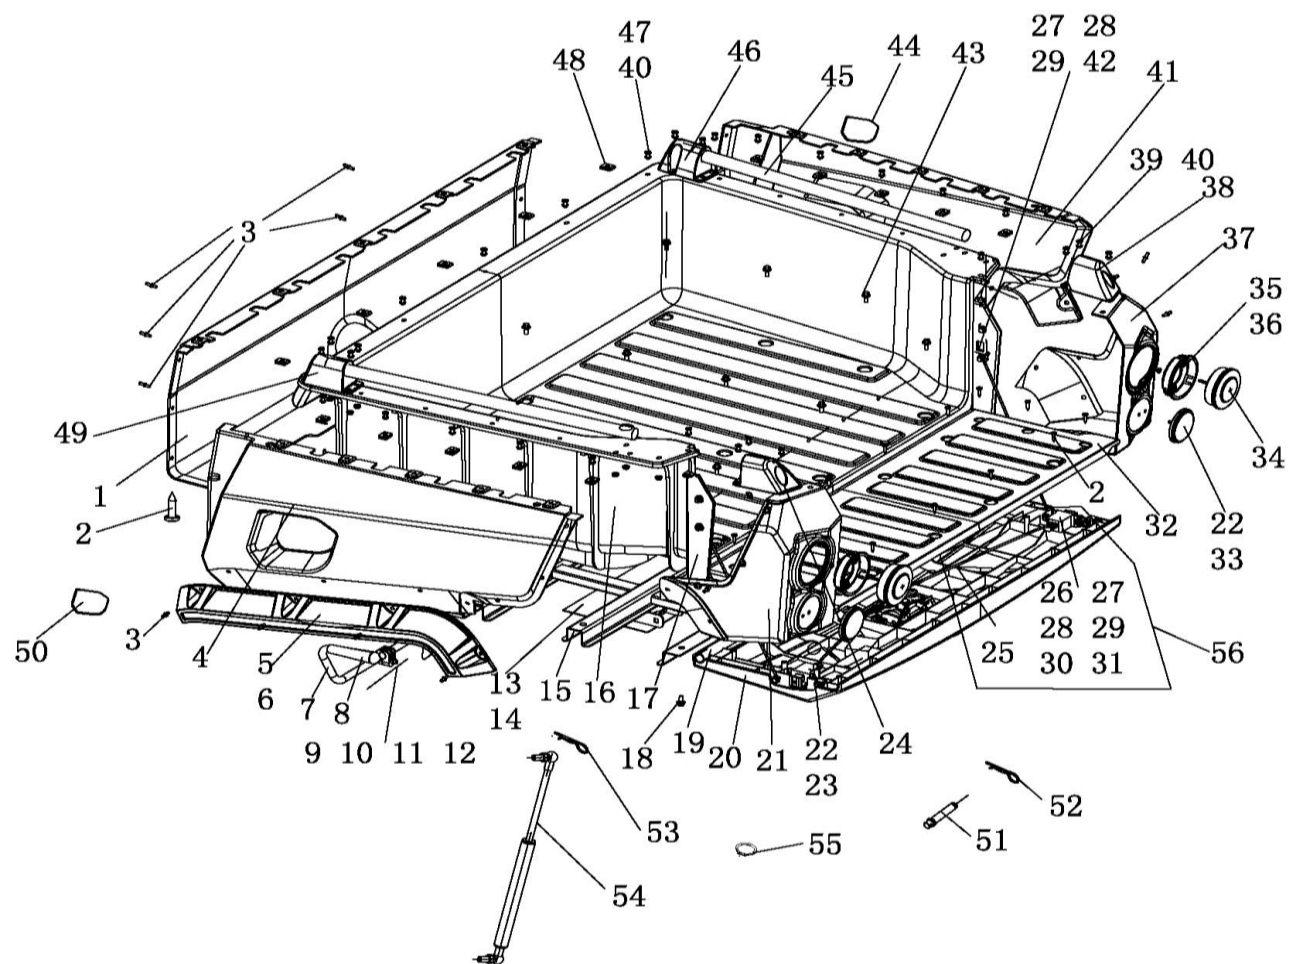

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
29	GB/T 6187.1 M8	NUT, FLANGE (M8)	六角法兰面螺母 (M8)	8	
30	W1216180	CABLE, CARGO BOX	后货箱门拉索	2	
31	W1216382	LOCK, GARGO BOX (R)	后货箱门锁 (右)	1	
32	W1216190	DOOR BOARD, CARGO BOX	后货箱门内板	1	
33	W1008040	REAR REFLECTOR	反光片	2	
34	W1008050	TAILLIGHT	尾灯	2	
35	W1008060	TAILLIGHT SEAT	尾灯座	2	
36	GB/T 6187.1 M5	NUT, FLANGE (M5)	六角法兰面螺母 (M5)	6	
37	W1216200	REAR CORNER COVER, CARGO BOX (L)	货箱后角罩 (左)	1	
38	W1216240	REAR HEIGHTEN WASHER (L)	货箱后增高块 (右)	1	
39	GB/T 819.1 M6×30	SCREW (M6×30)	大扁头螺栓 (M6×30)	14	
40	9011-060007	RUBBER WASHER (Φ6)	橡胶垫 (Φ6)	29	
41	W1216030	STARBOARD COVER, CARGO BOX	货箱右侧板	1	
42	W1216381	BUCKLE, PLATE	后货箱门锁扣	2	
43	GB/T 5787 M8×20	BOLT, FLANGE (M8×20)	六角法兰面螺栓 (M8×20)	16	
44	W1216420	CARGO BOX HANDLE RUBBER WASHER (R)	后货箱把手橡胶套 (右)	1	
45	W1216270	PROTECT COTE TUBE	护栏圆管	2	
46	W1216220	FRONT HEIGHTEN WASHER (L)	货箱前增高块 (右)	1	
47	GB/T 819.1 M6×20	SCREW (M6×20)	大扁头螺栓 (M6×20)	15	
48	9401-060003	NUT, CLIP (M6)	夹片螺母 (M6)	15	
49	W1216230	FRONT HEIGHTEN WASHER (R)	货箱前增高块 (左)	1	

50	W1216410	CARGO BOX HANDLE RUBBER WASHER (L)	后货箱把手橡胶套 (左)	1	
51	W1216310	PIN, CARGO BOX	后货箱安装销	2	
52	W1216320	“R” PIN (ϕ 4)	4R型销 (ϕ 4)	2	
53	W1216300	“R” PIN (ϕ 3)	R型销 (ϕ 3)	2	
54	W1216290	GAS SRPING, CARGO BOX	后货箱气弹簧	1	
55	GB/T 894.1 8	CIRCLIP (ϕ 8)	轴用挡圈 (ϕ 8)	4	
56	W1216380	LOCK, GARGO BOX ASSY	后拦板锁组件	2	


F25 保险杠、半门总成 BUMPER、 HALF DOOR

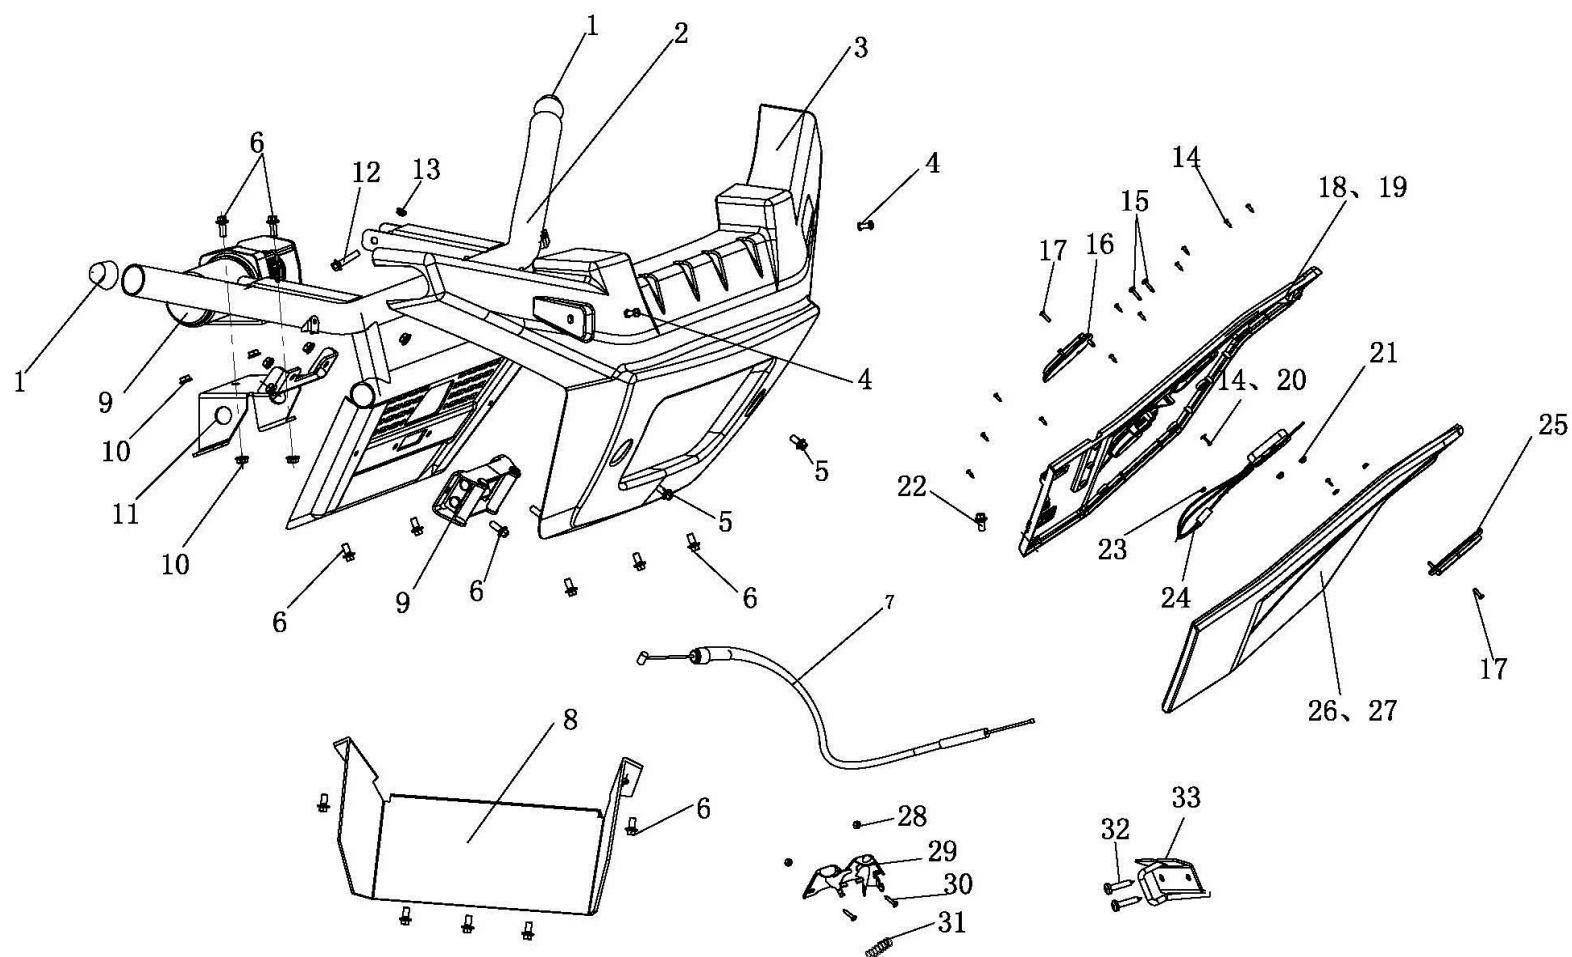

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	A1203030	COBBRA, BUMPER	保险杠堵头	2	借用500UTV
2	W1203010	BUMPER	保险杠总成	1	
3	W1203020	DECORATE COVER, FRONT BUMPER	前保险杠装饰罩	1	
4	GB/T 819.1 M6×20	SCREW (M6×20)	大扁头螺栓 (M6×20)	2	
5	GB/T 5787 M6×20	BOLT, FLANGE (M6×20)	六角法兰面螺栓 M6×20	8	
6	GB/T 5787 M8×16	BOLT, FLANGE (M8×16)	六角法兰面螺栓 (M8×16)	12	
7	W1101110	CABLE, FRONT COVER	前罩拉索	1	
8	W0203010	RADIATOR COVER, VENT GRILLE	水箱导风罩	1	
9	O1010010	WINCH	绞盘总成	1	
10	GB/T 6187.1 M8	LOCKNUT, FLANGE (M8)	六角法兰面自锁螺母 (M8)	8	
11	W1010020	WINCH HOLDER	绞盘固定板	1	
12	GB/T 5787 M10×1.25×70	BOLT, FLANGE (M10×1.25×70)	六角法兰面螺栓 (M10×1.25×70)	2	
13	GB/T 6187.1 M10×1.25	LOCKNUT, FLANGE (M10×1.25)	六角法兰面自锁螺母 M10×1.25	2	
14	GB/T 845 ST4.2×20	TAPPING SCREW (ST 4.2×20)	自攻螺钉 (ST 4.2×20)	28	XY1100UEL数量为: 56
15	GB/T 819.1 M6×25	SCREW (M6×25)	大扁头螺栓 (M6×25)	4	XY1100UEL数量为: 8
16	W1217010	HANDLE, HALF DOOR (L)	半门拉手组件 (左)	2	XY1100UEL数量为: 4
17	GB/T 823 M4.2×16	SCREW (M4.2×16)	十字半圆头螺栓 M4.2*16	4	XY1100UEL数量为: 8
18	W1217030	INNER HALF DOOR (L)	内半门 (左)	1	XY1100UEL数量为: 2
19	W1217040	INNER HALF DOOR (R)	内半门 (右)	1	XY1100UEL数量为: 2
20	GB/T 95 5	WASHER (Φ5×Φ10×1)	平垫片 (Φ5×Φ10×1)	2	XY1100UEL数量为: 2
21	GB/T 6187.1 M6	BOLT, FLANGE (M6)	六角法兰面螺母 (M6)	4	XY1100UEL数量为: 8

22	GB/T 5787 M6×16	BOLT, FLANGE (M6×16)	六角法兰面螺栓 (M6×16)	8	XY1100UEL数量为: 16
23	GB/T 6187.1 M5	BOLT, FLANGE (M5)	六角法兰面螺母 (M5)	4	XY1100UEL数量为: 8
24	W1217070	CABLE, HALF DOOR	半门拉索组件	2	XY1100UEL数量为: 4
25	W1217020	HANDLE, HALF DOOR (R)	半门拉手组件 (右)	2	XY1100UEL数量为: 4
26	W1217050	OUTER HALF DOOR (L)	外半门 (左)	1	XY1100UEL数量为: 2
27	W1217060	OUTER HALF DOOR (R)	外半门 (右)	1	XY1100UEL数量为: 2
28	GB/T 819.1 M6×20	SCREW (M6×20)	十字大扁头螺栓 (M6×20)	2	
29	W1101070	LOCK, FRONT COVER BOARD	前罩盖板锁组件	1	
30	GB/T 6187.1 M6	LOCKNUT, FLANGE (M6)	六角法兰面自锁螺母 (M6)	2	
31	W1101120	EXTENSION SPRING	前罩拉索回位弹簧	1	
32	GB/T 845 ST4.2×20	TAPPING SCREW (ST4.2×20)	自攻螺钉 (ST4.2×20)	2	
33	W1101030	LOCK, FRONT COVER BOARD	前罩盖板锁扣组件	1	


F26 吸塑件 PLASTIC COVER

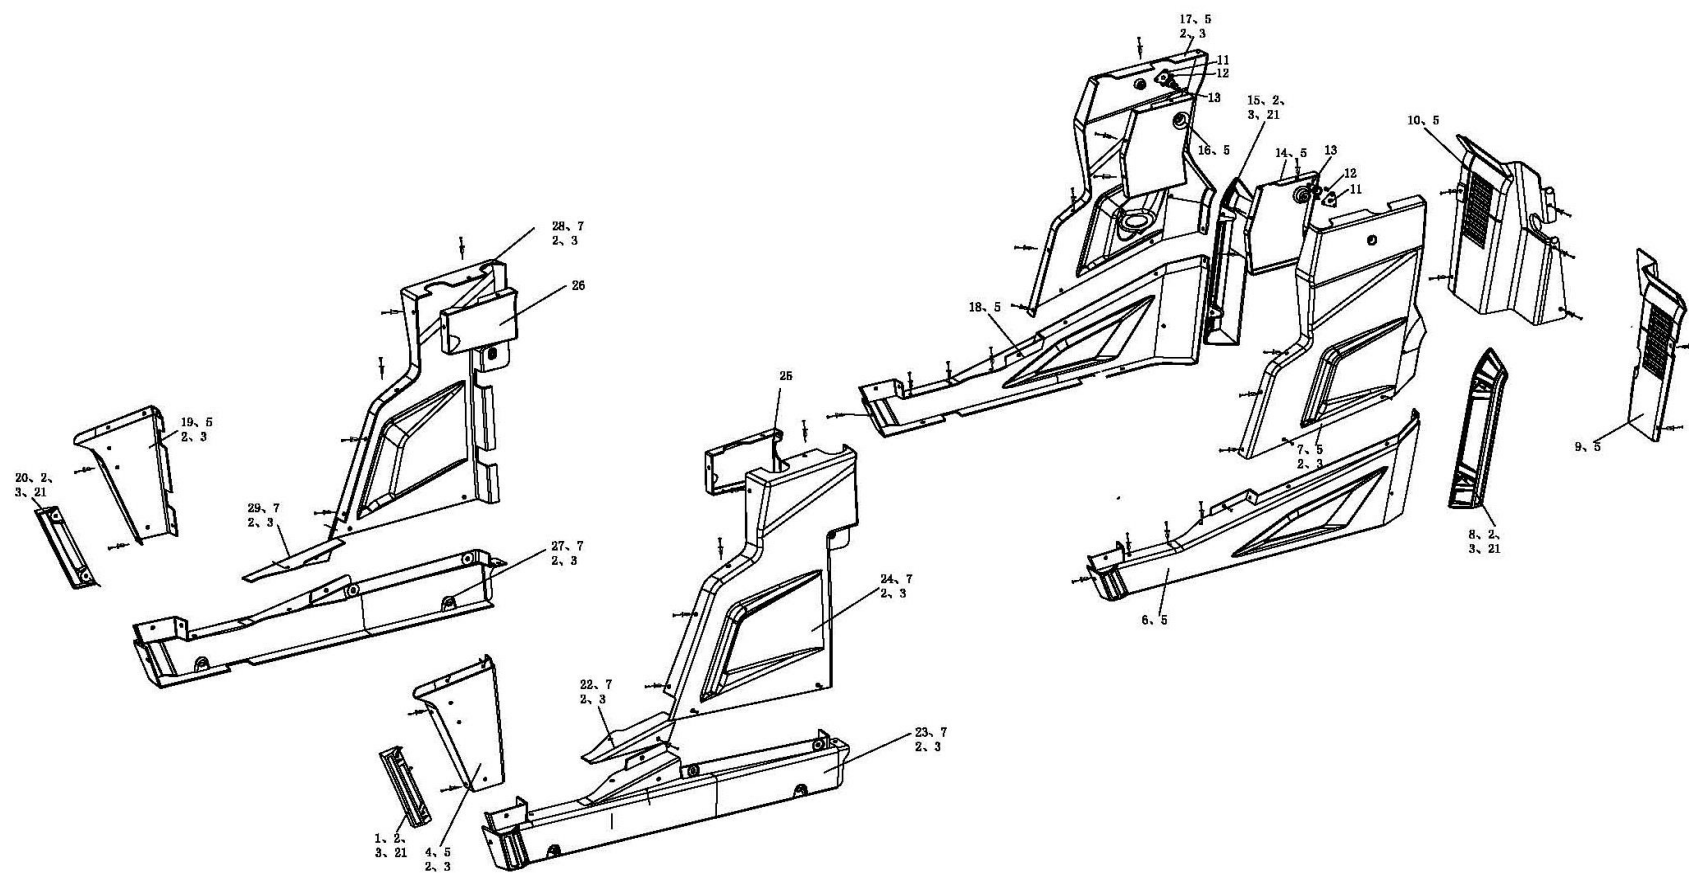

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W1103050	COVER, RIGHT LINE.FR (S)	前左短轮眉	1	
2	GB/T 819.1 M6×20	SCREW(M6×20)	大扁头螺栓(M6×20)	20	XY75DAL数量: 38
3	GB/T 6177.1 M6	NUT(M6)	六角锁紧螺母(M6)	20	XY75DAL数量: 38
4	W1101090	LEFT UNDERSIDE BOARD, ENGINE COVER	前罩左下侧板	1	
5	9305-080200	EXPANSION SCREW(M8×20)	塑料膨胀螺丝 (M8×20)	38	XY75DAL数量: 52
6	W1109010	REAR BOTTOM BOARD(L)	左后底部侧板	1	
7	W1109030	REAR LEFT BOARD	后左侧板	1	
8	W1208030	COVER, LEFT LINE.RR (S)	后左短轮眉	1	
9	W1208050	REAR LEFT FENDER	后左挡泥板	1	
10	W1208060	REAR RIGHT FENDER	后右挡泥板	1	
11	W1112040	SUPPORT, PIN	锥形销固定板	2	
12	GB/T 845 ST4.2×20	SCREW, TAP (ST4.2×20)	自攻螺钉 (ST4.2×20)	6	
13	W1112030	PIN	锥形销	2	
14	W1109180	REAR LEFT BOARD DECORATE COVER	后左侧板装饰板	1	
15	W1208040	COVER, RIGHT LINE.FR (S)	后右短轮眉	1	
16	W1109190	REAR RIGHT BOARD DECORATE COVER	后右侧板装饰板	1	
17	W1109040	REAR RIGHT BOARD	后右侧板	1	
18	W1109020	REAR BOTTOM BOARD(R)	右后底部侧板	1	
19	W1101100	RIGHT UNDERSIDE BOARD, FRONT COVER	前罩右下侧板	1	
20	W1103060	COVER, RIGHT LINE.FR (S)	前右短轮眉	1	
21	9011-060007	RUBBER WASHER(Φ6)	橡胶垫(Φ6)	10	


22	W1214010	BOTTOM LEFT TRIANGLE (F)	底板前左三角板	1	XY1100UEL
23	W1109050	FRONT BOTTOM BOARD (L)	左前底部侧板	1	
24	W1109070	MIDDLE LEFT BOARD	中左侧板	1	
25	W1109160	FRONT LEFT BOARD DECORATE COVER	前左侧板装饰板	1	
26	W1109170	FRONT RIGHT BOARD DECORATE COVER	前右侧板装饰板	1	
27	W1109060	FRONT BOTTOM BOARD (R)	右前底部侧板	1	
28	W1109080	MIDDLE RIGHT BOARD	中右侧板	1	
29	W1214020	BOTTOM RIGHT TRIANGLE (F)	底板前右三角板	1	

F27 后拖钩总成 HITCH BALL ASSY

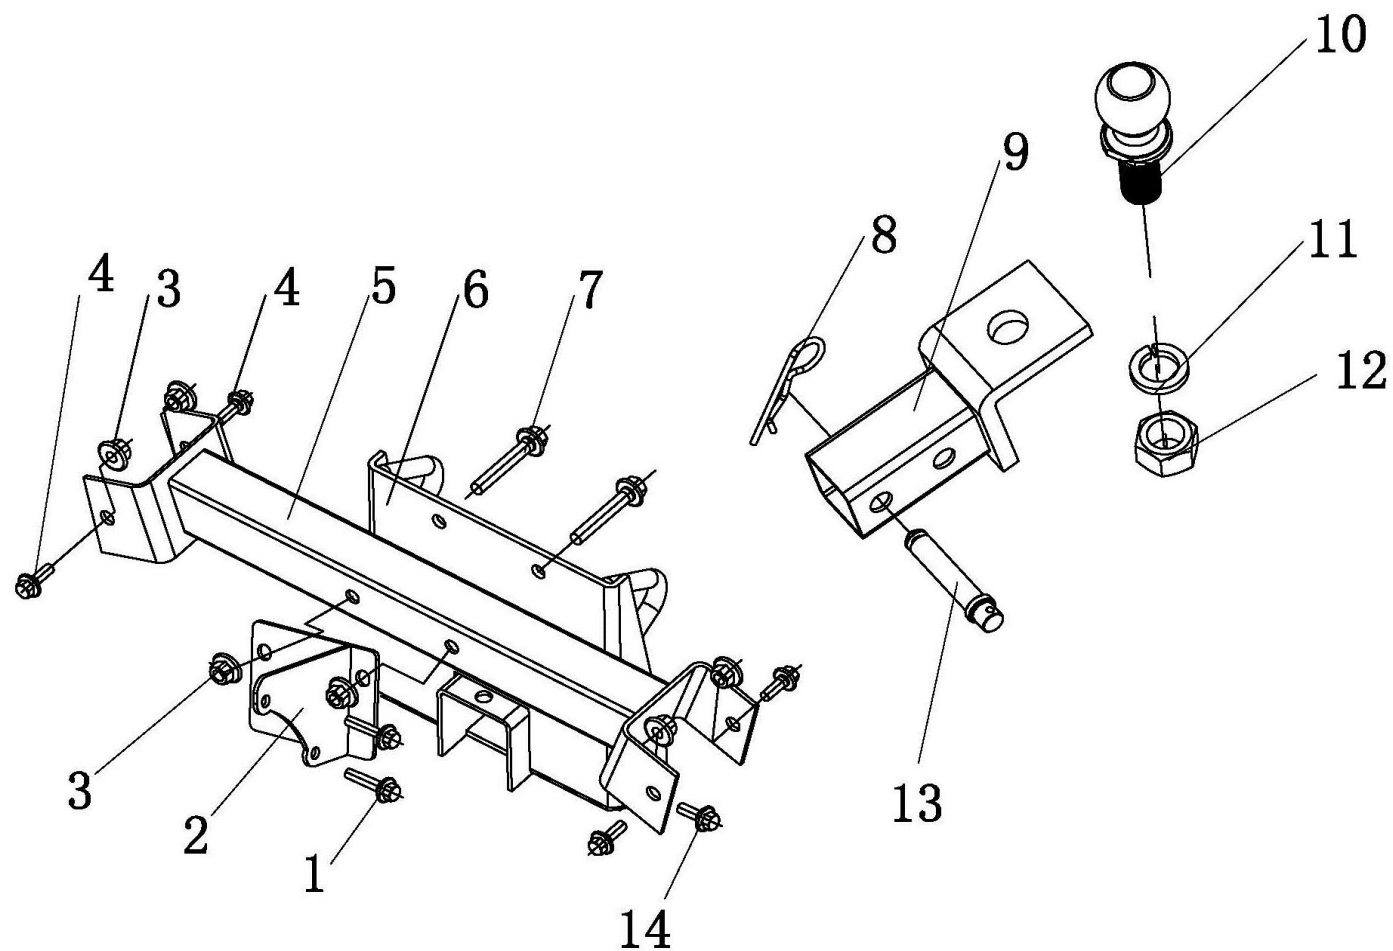


CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	GB/T 70.1 M8×40	BOLT (M8×40)	内六角圆柱头螺栓 (M8×40)	2	后桥附件
2	W0402040	HOLDER, REAR AXLE	后桥上固定座组件	1	
3	GB/T 6187.1 M8	LOCKNUT, FLANGE (M8)	六角法兰面自锁螺母 (M8)	6	
4	GB/T 5787 M8×16	BOLT, FLANGE (M8×16)	六角法兰面螺栓 (M8×16)	4	
5	W1219020	SUPPORT, HITCH BALL	后拖固定板组件	1	
6	W1219010	TOWING BRACKET ASSY	后拖组件	1	
7	GB/T 5787 M8×60	BOLT, FLANGE (M8×60)	六角法兰面螺栓 (M8×60)	2	
8	A1219010	“R” PIN	拖钩R形销	1	
9	A1219060	EXTENSION BRACKET ASSY	拖车球头伸缩杆 (喷塑)	1	
10	A1219030	HITCH BALL (3500LB 1 7/8")	拖车球头总成	1	
11	GB/T 93 25	SPRING WASHER (Φ 25)	弹簧垫片 (Φ 25)	1	
12	GB/T 6170 M25	BOLT (M25)	六角螺母 (M25)	1	
13	A1219020	SAFETY BOLT	拖钩插销	1	
14	GB/T 5787 M10×20	BOLT, FLANGE (M10×20)	六角法兰面螺栓 (M10×20)	2	
15					
16					
17					
18					
19					
20					
21					

F28 挡风玻璃总成 WINDSHIELD ASSY

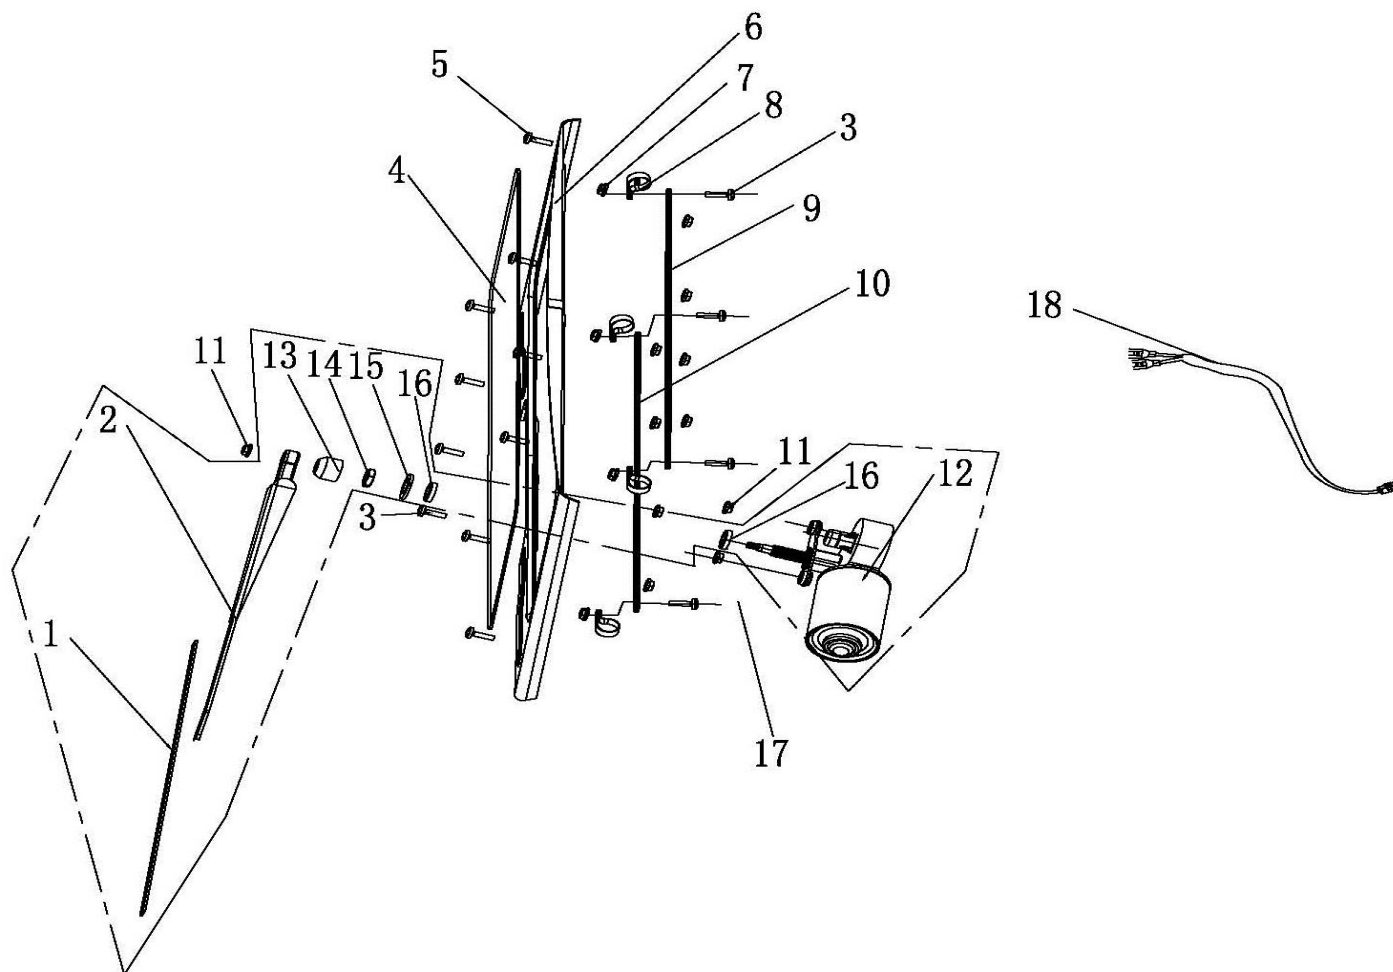


CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W1302090	WIPER BLADE	雨刷片	1	OPTION
2	W1302080	WIPER ARM	雨刮臂	1	
3	GB/T 819.1 M6×25	BOLT (M6×20)	大扁头螺栓 (M6×20)	6	
4	W1302030	WINDSHIELD SCALEBOARD	挡风玻璃	1	
5	GB/T 819.1 M6×16	BOLT (M6×16)	大扁头螺栓 (M6×16)	16	
6	W1302010	WINDSHIELD	挡风玻璃衬板	1	
7	GB/T 923 M6	CAP NUT (M6)	盖形螺母	20	
8	W1202030	HOOP (Φ 45)	抱箍 (Φ 45)	4	
9	W1302060	WINDSHIELD IMMOBILITY PLANK (TOP)	挡风玻璃上固定框	1	
10	W1302050	WINDSHIELD IMMOBILITY PLANK (BELOW)	挡风玻璃下固定框	1	
11	GB/T 6187.1 M6	NUT, FLANGE (M6)	六角法兰面螺母 (M6)	3	
12	W1302070	WIPER	雨刮电机组件	1	
13	A1302090	DUST COVER, RUBBER	橡胶防尘套	1	
14	GB/T 6174 M12	NUT (M12)	六角螺母	1	
15	GB/T 96 12	WASHER (Φ 12)	平垫片	2	
16	9015-060160	RUBBER WASHER	橡胶垫片	2	
17	W1312100	WIPER ASSY	雨刮器总成	1	
18	W1001070	WIRE, WIPER	雨刮电机线组件	1	
19					
20					
21					

F29 随车工具 TOOLS

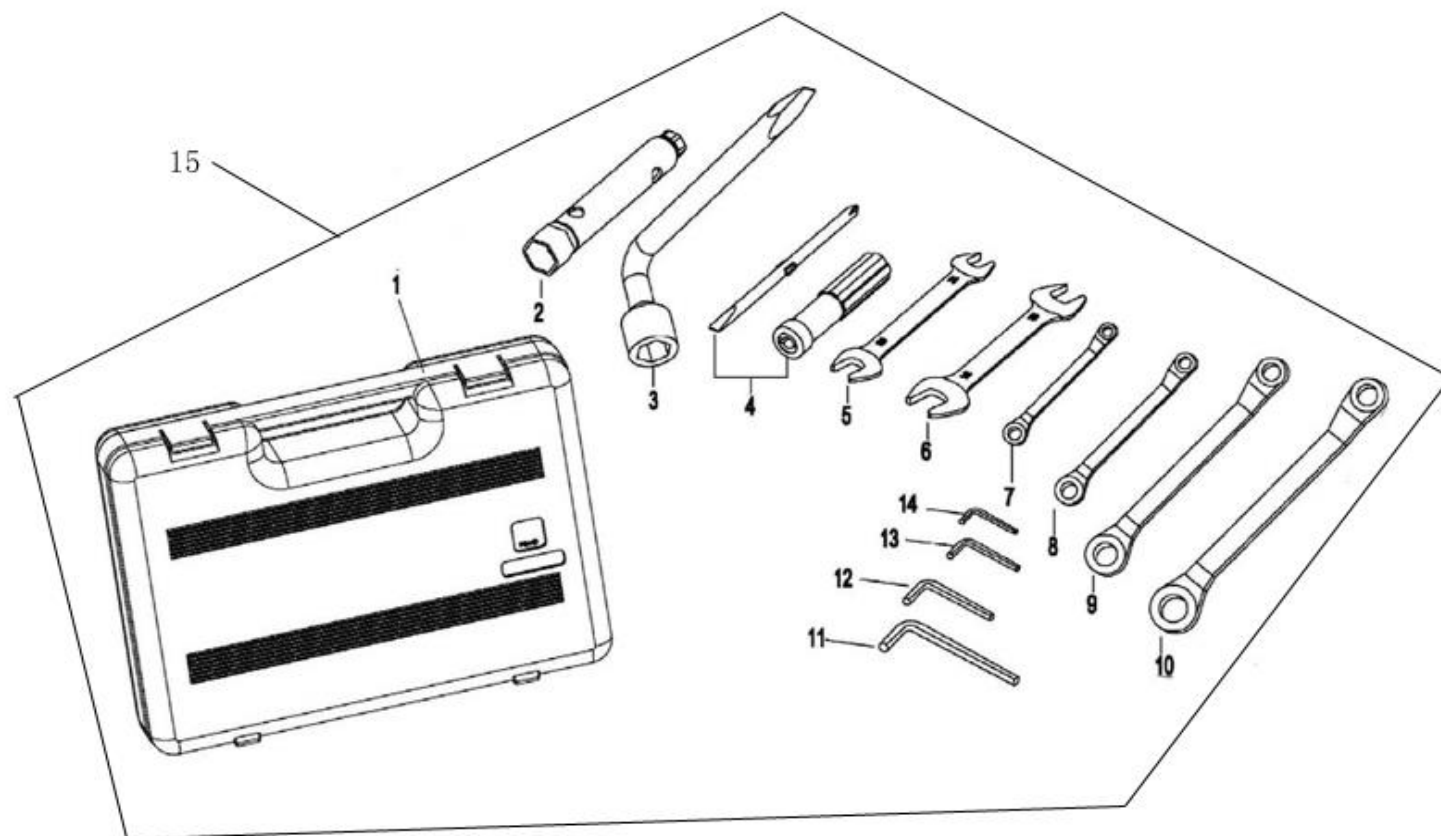


CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	Z0999094	TOOL BOX	工具箱	1	
2	U0700051	WRENCH, PLUG	火花塞套筒	1	
3	U0700049	WRENCH PLUG, TIRE	轮胎套筒	1	
4	U0800017	SCREWDRIVER	两用起子	1	
5	U0102006	SPANNER (12-14)	开口扳手 (12-14)	1	
6	U0102007	SPANNER (13-15)	开口扳手 (13-15)	1	
7	U0101001	SPANNER (5.5-7)	梅花扳手 (5.5-7)	1	
8	U0101003	SPANNER (8-10)	梅花扳手 (8-10)	1	
9	U0101009	SPANNER (14-17)	梅花扳手 (14-17)	1	
10	U0101011	SPANNER (17-19)	梅花扳手 (17-19)	1	
11	U0601006	INNER HEX SPANNER (10mm)	内六角扳手 (10mm)	1	
12	U0601005	INNER HEX SPANNER (8mm)	内六角扳手 (8mm)	1	
13	U0601004	INNER HEX SPANNER (6mm)	内六角扳手 (6mm)	1	
14	U0601003	INNER HEX SPANNER (5mm)	内六角扳手 (5mm)	1	
15	A1407010	TOOL BOX ASSM	随车工具组合	1	
16					
17					
18					
19					
20					
21					

F30 轮胎 TIRE ASSY

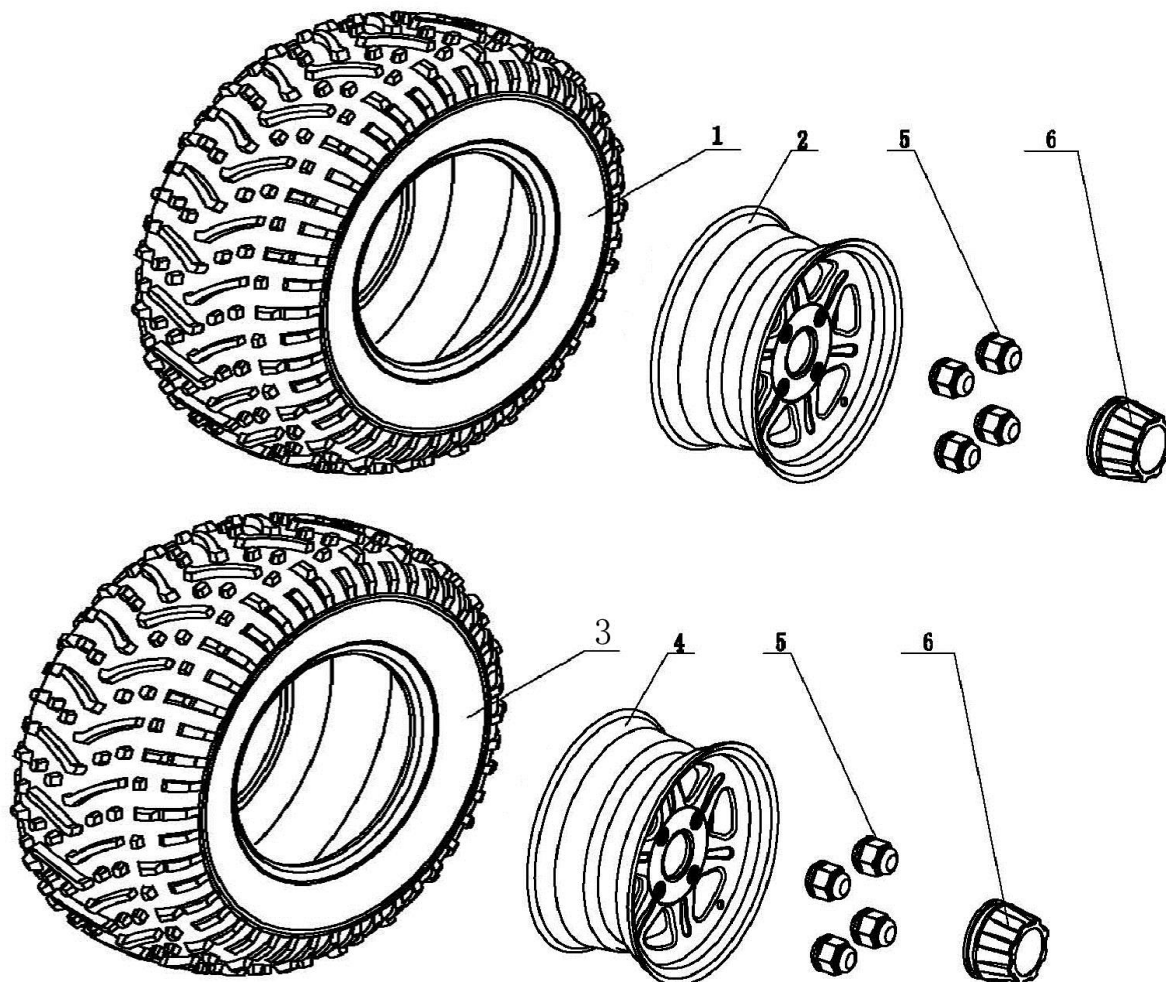

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W0601010	FRONT TIRE (27×9-14)	前轮胎 (26×9-14)	2	
	I0601010	FRONT TIRE (26×9-14)	前轮胎 (26×9-14)	2	OPTION
2	W0602010	RIM, FR. WHEEL (14×6.0)	前轮辋 (14×6.0)	2	14×6
3	W0601020	REAR TIRE (27×11-14)	后轮胎 (26×11-14)	2	
	I0601020	REAR TIRE (26×11-14)	后轮胎 (26×11-14)	2	OPTION
4	W0602020	RIM, RR. WHEEL (14×8.0)	后轮辋 (14×8.0)	2	14×8
5	W0601040	NUT , WHEEL (M12×1.25)	盖形锥度轮辋螺母 (M12×1.25)	16	M12-1.25
6	W0602060	DUST SEAL	轮辋装饰盖	4	
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					
17					
18					
19					
20					

F31 标识 LABELS

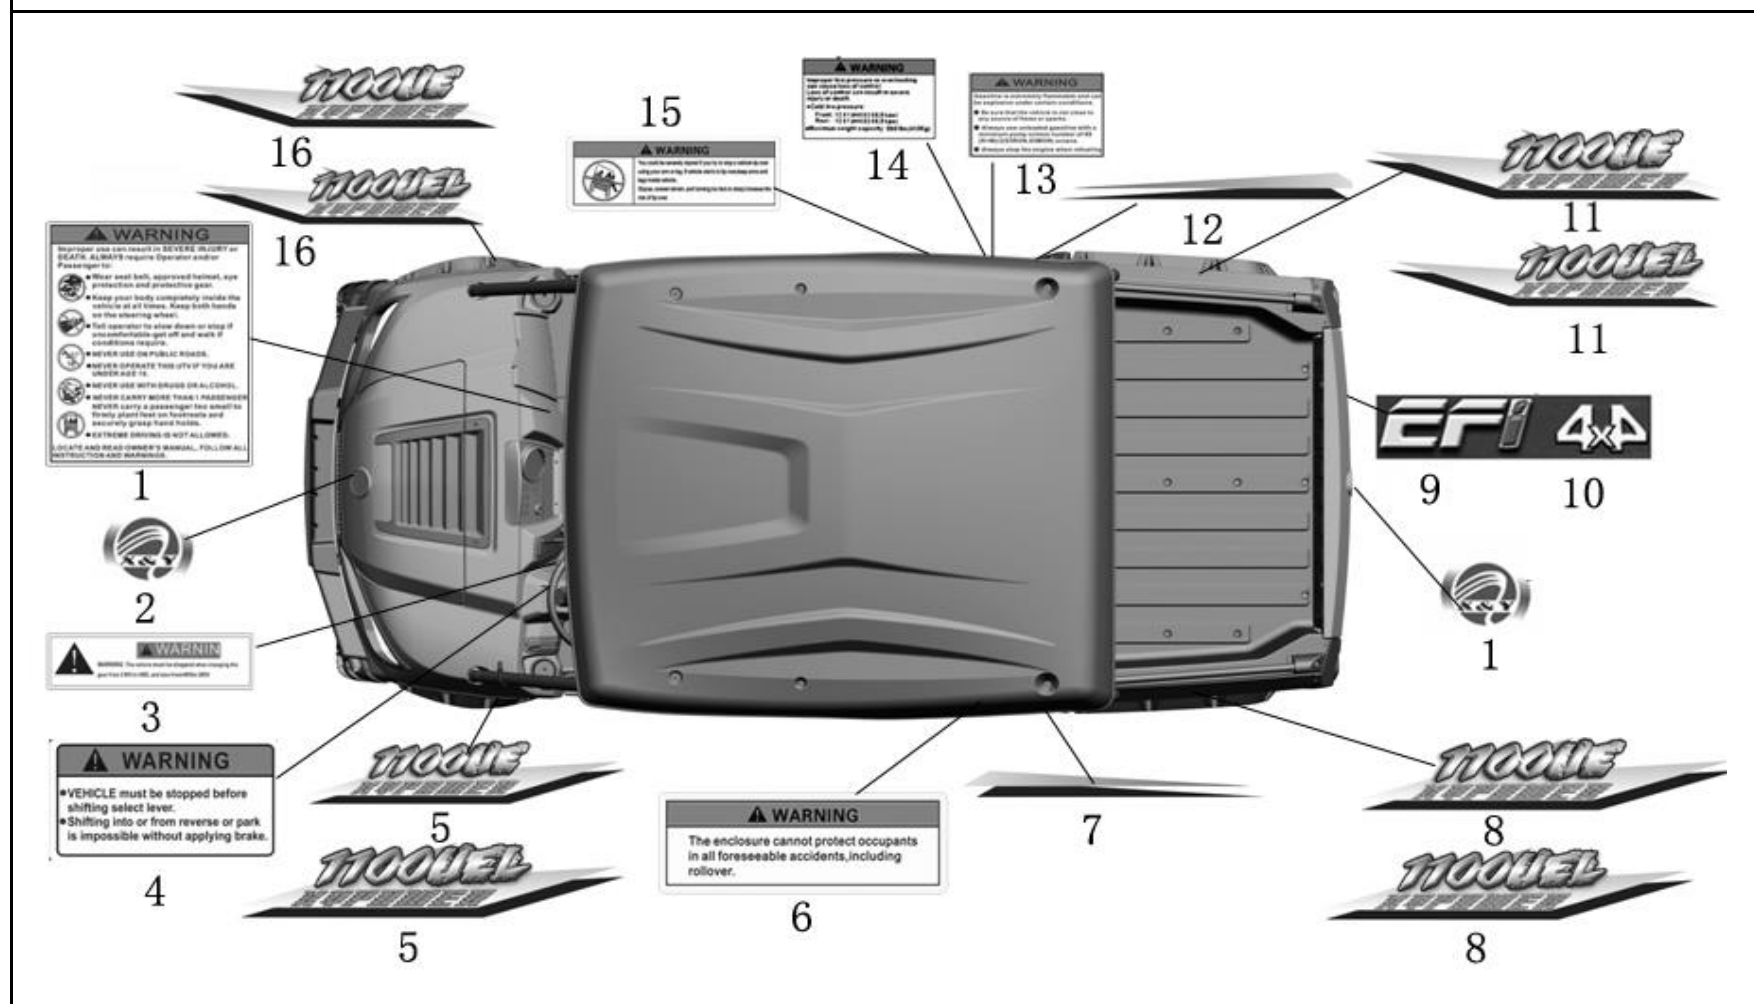

CODE	PART CODE	DESCRIPTION (EN)	DESCRIPTION (CN)	Q' TY	REMARKS
1	W1402040	LABEL, SAFETY MESSAGES	安全须知标识	1	
2	H1402160	Marks, Head Cover	标牌 (XXXX)	2	
3	A1402210	WARNING LABEL, FROM 4WD TO 2WD!	二四驱转换警示标贴	1	
4	A1402150	LABEL, GEARSHIFT	换挡警告贴花	1	
5	W1402050	Label, Front Engine Cover (R)	前机盖左侧标贴	1	
	W1402051	Label, Front Engine Cover (R)	前机盖左侧标贴	1	XY1100UEL
6	A1402010	WARNING LABEL (L)	安全警告 (左)	1	
7	L1402090	Nearside LABEL	左侧标贴	1	
8	W1402020	Label, Store Box (L)	货斗左侧标贴	1	
	W1402021	Label, Store Box (L)	货斗左侧标贴	1	XY1100UEL
9	W1402010	Marks, Head Cover	"EFI" 标牌	1	
10	H1402120	MARKS, DRIVE FORMAT	驱动形式标牌	1	
11	W1402030	Label, Store Box (R)	货斗右侧标贴	1	
	W1402031	Label, Store Box (R)	货斗右侧标贴	1	XY1100UEL
12	L1402010	Starboard LABEL	右侧标贴	1	
13	A1402220	PRTROL WARNING STICKY	汽油警告标贴	1	
14	W1402070	LABEL, TYRE PRESSURE	轮胎气压标识	1	
15	A1402020	WARNING LABEL (R)	安全警告 (右)	1	
16	W1402060	Label, Front Engine Cover (R)	前机盖右侧标贴	1	
	W1402061	Label, Front Engine Cover (R)	前机盖右侧标贴	1	XY1100UEL
17					
18					